

# **RoHS Compliant**

# M.2 2242 Flash Drive

SV250-M242 BiCS5 Product Specifications



November 9, 2022 Version 1.3



Apacer Technology Inc.

1F, No.32, Zhongcheng Rd., Tucheng Dist., New Taipei City, Taiwan, R.O.C Tel: +886-2-2267-8000 Fax: +886-2-2267-2261 www.apacer.com

## **Specifications Overview:**

- Compliance with SATA Revision 3.2
  - SATA 6 Gb/s interface
  - Backward compatible with SATA 1.5 and 3 Gb/s interfaces
  - ATA-8 command set
- Capacity
  - 120, 240, 480, 960 GB
- Performance<sup>1</sup>
  - Burst read/write: 600 MB/sec
  - Sequential read: Up to 560 MB/sec
  - Sequential write: Up to 470 MB/sec
  - Random read (4K): Up to 50,000 IOPS
  - Random write (4K): Up to 68,000 IOPS

#### • Flash Management

- Low-Density Parity-Check (LDPC) Code
- Global Wear Leveling
- Flash bad-block management
- Flash Translation Layer: Page Mapping
- S.M.A.R.T.
- DataDefender<sup>™</sup>
- Device Sleep
- ATA Secure Erase
- TRIM
- Hyper Cache Technology
- Over-provisioning
- DataRAID<sup>™2</sup>
- SMART Read Refresh<sup>™</sup>
- NAND Flash Type: 3D TLC (BiCS5)
- MTBF: >3,000,000 hours
- Endurance (in drive writes per day: DWPD)
  - 120 GB: 2.03 DWPD
  - 240 GB: 2.28 DWPD
  - 480 GB: 2.21 DWPD
  - 960 GB: 2.34 DWPD

#### Notes:

- 1. Varies from capacities. The values for performances and power consumptions presented are typical and may vary depending on flash configurations or platform settings. The term idle refers to the standby state of the device.
- 2. Supported on standard model and TCG Opal-supported model of 240-960GB capacities.

- Temperature Range
  - Operating:
    - Standard: 0°C to 70°C Wide: -40°C to 85°C
  - Storage: -55°C to 100°C
- Supply Voltage
  - 3.3 V ± 5%
- Power Consumption<sup>1</sup>
  - Active mode (Max.): 380 mA
  - Idle mode: 60 mA
- SATA Power Management Modes
- Connector Type
  - 75-pin SATA-based M.2 module pinout
- Form Factor
  - M.2 2242-D5-B-M
  - Dimensions: 42.00 x 22.00 x 3.80, unit: mm
  - Net weight:  $3.86g \pm 5\%$
- Security
  - AES 256-bit hardware encryption
  - Trusted Computing Group (TCG) Opal 2.0 (optional)

1

- Reliability
  - Thermal Sensor
  - End-to-End Data Protection
- RoHS Compliant

# **Table of Contents**

1. General Description	4
2. Functional Block	4
3. Pin Assignments	5
4. Product Specifications	8
4.1 Capacity	8
4.2 Performance	
4.3 Environmental Specifications	9
4.4 Mean Time Between Failures (MTBF)	9
4.5 Certification and Compliance	9
4.6 Endurance	10
4.7 LED Indicator Behavior	
5. Flash Management	11
5.1 Error Correction/Detection	
5.2 Bad Block Management	
5.3 Global Wear Leveling	
5.4 Flash Translation Layer – Page Mapping	
5.5 TRIM	
5.6 DataDefender™	12
5.7 ATA Secure Erase	
5.8 Device Sleep (DevSleep or DEVSLP) Mode	
5.9 Hyper Cache Technology	
5.10 Over-provisioning	
5.11 DataRAID <sup>™</sup>	
5.12 SMART Read Refresh™	
5.13 SATA Power Management	
6. Security and Reliability Features	14
6.1 Advanced Encryption Standard	14
6.2 TCG Opal (optional)	14
6.3 Thermal Sensor	14
6.4 End-to-End Data Protection	
7. Software Interface	
7.1 Command Set	15

7.2 S.M.A.R.T.	
8. Electrical Specifications	18
8.1 Operating Voltage	
8.2 Power Consumption	
9. Mechanical Specifications	19
9.1 Dimensions	
9.2 Net Weight	19
10. Product Ordering Information	20
10.1 Product Code Designations	
10.2 Valid Combinations	21

## **1. General Description**

Apacer's SV250-M242, utilizing 3D NAND for higher capacity up to 960GB and providing more power efficiency than 2D NAND, is the next generation Solid State Drive (SSD) with compact and high-speed storage. Designed in SATA 6 Gb/s interface, SV250-M242 provides full compliance with the latest SATA Revision 3.2 interface specifications and delivers exceptional read/write speed, making it the leading add-in storage solution for future host computing systems.

SV250-M242 is built with a powerful SATA controller that supports on-the-module ECC as well as efficient wear leveling scheme and implemented with LDPC (Low Density Parity Check) ECC engine to extend SSD endurance and increase data reliability. Furthermore, SV250-M242 is equipped with a built-in thermal sensor to monitor the temperature of the SSD via S.M.A.R.T commands to prevent overheating. Operating under 6 Gb/s interface, SV250-M242 is provided with Apacer latest S.M.A.R.T. that is primarily oriented for the latest SATA interface SSD, for drive lifetime monitoring and analysis. For highly-intensive applications, End-to-End Data Protection ensures that data integrity can be assured at multiple points in the path to enable reliable delivery of data transfers.

Security-wise, Advanced Encryption Standard (AES) and Trusted Computing Group (TCG) Opal (optional) ensure data security and provide users with peace of mind knowing their data is safeguarded against unauthorized use at all times. SV250-M242 also adopts the latest page mapping file translation layer and comes with various implementations including power saving modes, wear leveling, flash block management, S.M.A.R.T., TRIM, Hyper Cache technology, over-provisioning, DataDefender<sup>™</sup>, DataRAID<sup>™</sup> and SMART Read Refresh<sup>™</sup>.

With exceptional performance, trustable reliability and cost effectiveness, SV250-M242 is definitely the ideal storage or cache solution for a variety of applications ranging from industrial, imaging, computing to enterprise markets.

## **2. Functional Block**

Apacer SV250-M242 includes a single-chip controller and flash media. The controller integrates the flash management unit to support multi-channel, multi-bank flash arrays. Figure 2-1 shows the functional block diagram.

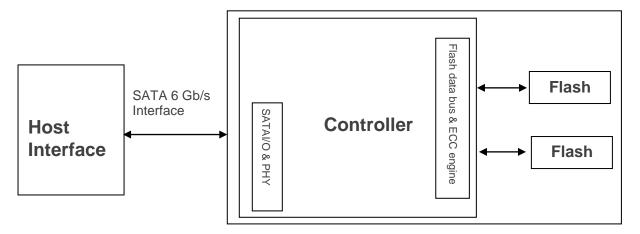


Figure 2-1 Functional Block Diagram

## **3. Pin Assignments**

This connector does not support hot plug capability. There are a total of 75 pins. 12 pin locations are used for mechanical key locations; this allows such a module to plug into both Key B and Key M connectors.

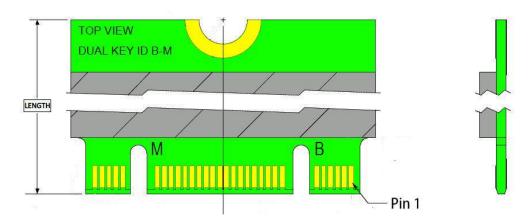


Figure 3-1 SATA Connectors

**Table 3-1 Pin Assignments** 

Pin	Туре	Description
1	CONFIG_3	Ground (according to M.2 configurations for SSD-SATA definition)
2	3.3V	Supply Pin, 3.3V
3	GND	Ground
4	3.3V	Supply pin, 3.3V
5	No connect	No connect
6	Not available	No connect
7	Not available	No connect
8	Not available	Reserved for Apacer use only <sup>1</sup>
9	No connect	No connect
10	DAS/DSS	Device Activity Signal/Disable Staggered Spin-up
11	No connect	No connect
12	(removed for key)	Mechanical notch B
13	(removed for key)	Mechanical notch B
14	(removed for key)	Mechanical notch B
15	(removed for key)	Mechanical notch B
16	(removed for key)	Mechanical notch B
17	(removed for key)	Mechanical notch B
18	(removed for key)	Mechanical notch B
19	(removed for key)	Mechanical notch B
20	Not available	No connect
21	CONFIG_0	Ground (according to M.2 configurations for SSD-SATA definition)
22	Not available	No connect

23     Not available     No connect       24     Not available     No connect       25     Not available     No connect       26     Not available     No connect       27     GND     Ground       28     Not available     No connect       29     PERn1     No connect       30     Not available     No connect       31     PERp1     No connect       32     Not available     No connect       33     GND     Ground       34     Not available     No connect       35     PETn1     No connect       36     Not available     No connect       37     PETp1     No connect       38     DEVSLP     Device Sleep, input. If driven high the host is informing the SSD to enter a low power state       39     GND     Ground       40     Not available     No connect       41     SATA-Rx+     Host receiver differential signal pair       42     Not available     No connect       43     SATA-Rx-     Host receiver differential signal pair       44     Not available     No connect       45     GND     Ground       46     Not available     No connect       47     SATA-Tx+ <th></th> <th></th> <th></th>			
24     Not available     No connect       25     Not available     No connect       26     Not available     No connect       27     GND     Ground       28     Not available     No connect       29     PERn1     No connect       30     Not available     No connect       31     PERp1     No connect       32     Not available     No connect       33     GND     Ground       34     Not available     No connect       35     PETn1     No connect       36     Not available     No connect       37     PETp1     No connect       38     DEVSLP     Device Sleep, input. If driven high the host is informing the SD to enter a low power state       39     GND     Ground       40     Not available     No connect       41     SATA-Rx+     Host receiver differential signal pair       42     Not available     No connect       43     SATA-Rx-     Host receiver differential signal pair       44     Not available     No connect       45     GND     Ground       46     Not available     No connect       47     SATA-Rx+     Host treceiver differential signal pair       48 <th>Pin</th> <th>Туре</th> <th>Description</th>	Pin	Туре	Description
25       Not available       No connect         26       Not available       No connect         27       GND       Ground         28       Not available       No connect         29       PERn1       No connect         30       Not available       No connect         31       PERp1       No connect         32       Not available       No connect         33       GND       Ground         34       Not available       No connect         35       PETn1       No connect         36       Not available       No connect         37       PETp1       No connect         38       DEVSLP       Device Sleep, input. If driven high the host is informing the SSD to enter a low power state         39       GND       Ground         41       SATA-Rx+       Host receiver differential signal pair         42       Not available       No connect         43       SATA-Rx-       Host receiver differential signal pair         44       Not available       No connect         45       GND       Ground         46       Not available       No connect         47       SATA-Tx+       Host tre	23	Not available	No connect
26       Not available       No connect         27       GND       Ground         28       Not available       No connect         29       PERn1       No connect         30       Not available       No connect         31       PERp1       No connect         32       Not available       No connect         33       GND       Ground         34       Not available       No connect         35       PETn1       No connect         36       Not available       No connect         37       PETp1       No connect         38       DEVSLP       Device Sleep, input. If driven high the host is informing the SSD to enter a low power state         39       GND       Ground         40       Not available       No connect         41       SATA-Rx+       Host receiver differential signal pair         42       Not available       No connect         43       SATA-Rx+       Host receiver differential signal pair         44       Not available       No connect         45       GND       Ground         46       Not available       No connect         47       SATA-Tx+       Host tre	24	Not available	No connect
27GNDGround28Not availableNo connect29PERn1No connect30Not availableNo connect31PERp1No connect32Not availableNo connect33GNDGround34Not availableNo connect35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx+Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential signal pair48Not availableNo connect49SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx-Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Re	25	Not available	No connect
28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           <	26	Not available	No connect
29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect	27	GND	Ground
30Not availableNo connect31PERp1No connect32Not availableNo connect33GNDGround34Not availableNo connect35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host treceiver differential signal pair48Not availableNo connect49SATA-Tx-Host transmitter differential pair50PERST#No connect51GNDGround62CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M	28	Not available	No connect
31PERp1No connect32Not availableNo connect33GNDGround34Not availableNo connect35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential signal pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M	29	PERn1	No connect
32Not availableNo connect33GNDGround34Not availableNo connect35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host receiver differential signal pair48Not availableNo connect49SATA-Tx-Host transmitter differential pair48Not availableNo connect50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M	30	Not available	No connect
33GNDGround34Not availableNo connect35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host receiver differential signal pair48Not availableNo connect49SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	31	PERp1	No connect
34Not availableNo connect35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host treceiver differential signal pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M	32	Not available	No connect
35PETn1No connect36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host treceiver differential signal pair48Not availableNo connect49SATA-Tx-Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M	33	GND	Ground
36Not availableNo connect37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M	34	Not available	No connect
37PETp1No connect38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	35	PETn1	No connect
38DEVSLPDevice Sleep, input. If driven high the host is informing the SSD to enter a low power state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host traceiver differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only160(removed for key)Mechanical notch M	36	Not available	No connect
36DevsLPpower state39GNDGround40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	37	PETp1	No connect
40Not availableNo connect41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	38	DEVSLP	
41SATA-Rx+Host receiver differential signal pair42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	39	GND	Ground
42Not availableNo connect43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	40	Not available	No connect
43SATA-Rx-Host receiver differential signal pair44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	41	SATA-Rx+	Host receiver differential signal pair
44Not availableNo connect45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only160(removed for key)Mechanical notch M	42	Not available	No connect
45GNDGround46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	43	SATA-Rx-	Host receiver differential signal pair
46Not availableNo connect47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only160(removed for key)Mechanical notch M	44	Not available	No connect
47SATA-Tx-Host transmitter differential pair48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	45	GND	Ground
48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	46	Not available	No connect
49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	47	SATA-Tx-	Host transmitter differential pair
50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	48	Not available	No connect
51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	49	SATA-Tx+	Host transmitter differential pair
52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	50	PERST#	No connect
53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	51	GND	Ground
54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	52	CLKREQ#	No connect
55REFCLKPNo connect56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	53	REFCLKN	No connect
56MFG1Reserved for Apacer use only157GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	54	PEWAKE#	No connect
57GNDGround58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	55	REFCLKP	No connect
58MFG2Reserved for Apacer use only159(removed for key)Mechanical notch M60(removed for key)Mechanical notch M	56	MFG1	Reserved for Apacer use only <sup>1</sup>
59     (removed for key)     Mechanical notch M       60     (removed for key)     Mechanical notch M	57	GND	Ground
60     (removed for key)   Mechanical notch M	58	MFG2	Reserved for Apacer use only <sup>1</sup>
	59	(removed for key)	Mechanical notch M
61 (removed for key) Mechanical notch M	60	(removed for key)	Mechanical notch M
(removed for key)	61	(removed for key)	Mechanical notch M
62 (removed for key) Mechanical notch M	62	(removed for key)	Mechanical notch M

#### Table 3-1 Pin Assignments

7

Pin	Туре	Description
63	(removed for key)	Mechanical notch M
64	(removed for key)	Mechanical notch M
65	(removed for key)	Mechanical notch M
66	(removed for key)	Mechanical notch M
67	Not available	No connect
68	SUSCLK	No connect
69	CONFIG_1	Ground
70	3.3V	Supply pin, 3.3V
71	GND	Ground
72	3.3V	Supply pin, 3.3V
73	GND	Ground
74	3.3V	Supply pin, 3.3V
75	CONFIG_2	Ground

#### **Table 3-1 Pin Assignments**

Note:

1. Reserved by Apacer, please do not connect to a host.

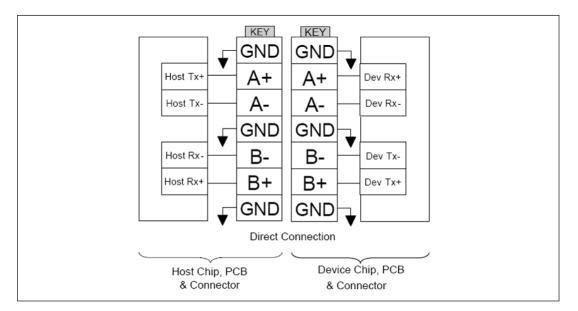


Figure 3-2 Direct Connection between the Host and Device

## 4. Product Specifications

### 4.1 Capacity

Capacity specifications of SV250-M242 are available as shown in Table 4-1. It lists the specific capacity and the default numbers of heads, sectors and cylinders for each product line.

Capacity	Total bytes	Cylinders	Heads	Sectors	Total LBA
120 GB	120,034,123,776	16,383	16	63	234,441,648
240 GB	240,057,409,536	16,383	16	63	468,862,128
480 GB	480,103,981,056	16,383	16	63	937,703,088
960 GB	960,197,124,096	16,383	16	63	1,875,385,008

Table 4-1	Capacity	<b>Specifications</b>
	Suparity	opcontoutions

Notes:

• Display of total bytes varies from operating systems.

• 1 GB = 1,000,000,000 bytes; 1 sector = 512 bytes.

• LBA count addressed in the table above indicates total user storage capacity and will remain the same throughout the lifespan of the device. However, the total usable capacity of the SSD is most likely to be less than the total physical capacity because a small portion of the capacity is reserved for device maintenance usages.

### 4.2 Performance

Performance of SV250-M242 is listed below in Table 4-2.

#### **Table 4-2 Performance Specifications**

Capacity Performance	120 GB	240 GB	480 GB	960 GB
Sequential Read (MB/s)	440	560	560	560
Sequential Write (MB/s)	190	470	470	470
Random Read IOPS (4K)	22,000	35,000	50,000	50,000
Random Write IOPS (4K)	43,000	68,000	60,000	60,000

Notes:

• Results may differ from various flash configurations or host system setting.

• Sequential read/write is based on CrystalDiskMark 8.0.4 with file size 1,000MB.

Random read/write is measured using IOMeter with Queue Depth 32.

### **4.3 Environmental Specifications**

Environmental specifications of SV250-M242 product are shown in Table 4-3.

Table 4-3	Environmental	Specifications
-----------	---------------	----------------

Item	Specifications
Operating temp.	0°C to 70°C (Standard); -40°C to 85°C (Wide)
Non-operating temp.	-55°C to 100°C
Operating vibration	7.69 GRMS, 20~2000 Hz/random (compliant with MIL-STD-810G)
Non-operating vibration	4.02 GRMS, 15~2000 Hz/random (compliant with MIL-STD-810G)
Operating shock	50G, 11ms
Non-operating shock	1500G, 0.5ms (compliant with MIL-STD-883K)

Note: This Environmental Specification table indicates the conditions for testing the device. Real world usages may affect the results.

### 4.4 Mean Time Between Failures (MTBF)

Mean Time Between Failures (MTBF) is predicted based on reliability data for the individual components in SV250-M242. The prediction result for SV250-M242 is more than 3,000,000 hours.

Note: The MTBF is predicated and calculated based on "Telcordia Technologies Special Report, SR-332, Issue 3" method.

### 4.5 Certification and Compliance

SV250-M242 complies with the following standards:

- CE
- FCC
- RoHS Recast
- MIL-STD-810G

### 4.6 Endurance

The endurance of a storage device is predicted by Drive Writes Per Day based on several factors related to usage, such as the amount of data written into the drive, block management conditions, and daily workload for the drive. Thus, key factors, such as Write Amplifications and the number of P/E cycles, can influence the lifespan of the drive.

#### **Table 4-4 Endurance Specifications**

Capacity	Drive Writes Per Day
120 GB	2.03
240 GB	2.28
480 GB	2.21
960 GB	2.34

Notes:

 This estimation complies with JEDEC JESD-219, Enterprise endurance workload of random data with payload size distribution.

Flash vendor guaranteed 3D NAND TLC P/E cycle: 3K

• WAF may vary from capacity, flash configurations and writing behavior on each platform.

• 1 Terabyte = 1,024 GB

 DWPD (Drive Write Per Day) is calculated based on the number of times that user overwrites the entire capacity of an SSD per day of its lifetime during the warranty period. (3D NAND TLC warranty: 3 years)

### 4.7 LED Indicator Behavior

The behavior of the SV250-M242 LED indicators is described in Table 4-5.

#### Table 4-5 LED Behavior

Location	LED	Description
LED A	HDDA1	LED blinks when the drive is being accessed
	A	



## **5. Flash Management**

### **5.1 Error Correction/Detection**

SV250-M242 implements a hardware ECC scheme, based on the Low Density Parity Check (LDPC). LDPC is a class of linear block error correcting code which has apparent coding gain over BCH code because LDPC code includes both hard decoding and soft decoding algorithms. With the error rate decreasing, LDPC can extend SSD endurance and increase data reliability while reading raw data inside a flash chip.

#### 5.2 Bad Block Management

Current production technology is unable to guarantee total reliability of NAND flash memory array. When a flash memory device leaves factory, it comes with a minimal number of initial bad blocks during production or out-of-factory as there is no currently known technology that produce flash chips free of bad blocks. In addition, bad blocks may develop during program/erase cycles. Since bad blocks are inevitable, the solution is to keep them in control. Apacer flash devices are programmed with ECC, page mapping technique and S.M.A.R.T to reduce invalidity or error. Once bad blocks are detected, data in those blocks will be transferred to free blocks and error will be corrected by designated algorithms.

#### 5.3 Global Wear Leveling

Flash memory devices differ from Hard Disk Drives (HDDs) in terms of how blocks are utilized. For HDDs, when a change is made to stored data, like erase or update, the controller mechanism on HDDs will perform overwrites on blocks. Unlike HDDs, flash blocks cannot be overwritten and each P/E cycle wears down the lifespan of blocks gradually. Repeatedly program/erase cycles performed on the same memory cells will eventually cause some blocks to age faster than others. This would bring flash storages to their end of service term sooner. Global wear leveling is an important mechanism that levels out the wearing of all blocks so that the wearing-down of all blocks can be almost evenly distributed. This will increase the lifespan of SSDs.

### 5.4 Flash Translation Layer – Page Mapping

Page mapping is an advanced flash management technology whose essence lies in the ability to gather data, distribute the data into flash pages automatically, and then schedule the data to be evenly written. Page-level mapping uses one page as the unit of mapping. The most important characteristic is that each logical page can be mapped to any physical page on the flash memory device. This mapping algorithm allows different sizes of data to be written to a block as if the data is written to a data pool and it does not need to take extra operations to process a write command. Thus, page mapping is adopted to increase random access speed and improve SSD lifespan, reduce block erase frequency, and achieve optimized performance and lifespan.

#### **5.5 TRIM**

TRIM is a SATA command that helps improve the read/write performance and efficiency of solid-state drives (SSD). The command enables the host operating system to inform SSD controller which blocks contain invalid data, mostly because of the erase commands from host. The invalid will be discarded permanently and the SSD will retain more space for itself.

### 5.6 DataDefender<sup>™</sup>

Apacer's DataDefender is an advanced technology of power failure management which combines both firmware and hardware mechanisms to ensure data integrity. When power disruption occurs, the low voltage detector will be triggered. When this happens, the SSD's protection mechanism is activated and cuts off data transmission from the host. Once the power supply is resumed, the firmware protection mechanism will ensure the integrity of the firmware as well as the data already written into the NAND flash media.

### **5.7 ATA Secure Erase**

ATA Secure Erase is an ATA disk purging command currently embedded in most of the storage drives. Defined in ATA specifications, (ATA) Secure Erase is part of Security Feature Set that allows storage drives to erase all user data areas. The erase process usually runs on the firmware level as most of the ATA-based storage media currently in the market are built-in with this command. ATA Secure Erase can securely wipe out the user data in the drive and protects it from malicious attack.

### 5.8 Device Sleep (DevSleep or DEVSLP) Mode

Device Sleep is a feature that allows SATA devices to enter a low power mode by designating a particular pin as DEVSLP signal with an aim to reducing power consumption.





### 5.9 Hyper Cache Technology

Apacer proprietary Hyper Cache technology uses a portion of the available capacity as SLC (1bit-percell) NAND flash memory, called Hyper cache mode. When data is written to SSD, the firmware will direct the data to Hyper Cache mode, providing excellent performance to handle various scenarios in industrial use.

### 5.10 Over-provisioning

Over-provisioning (OP) is a certain portion of the SSD capacity exclusively for increasing Garbage Collection (GC) efficiency, especially when the SSD is filled to full capacity or performs a heavy mixed-random workload. OP has the advantages of providing extended life expectancy, reliable data integrity, and high sustained write performance.

### 5.11 DataRAID<sup>™</sup>

Apacer's DataRAID algorithm applies an additional level of protection and error-checking. Using this algorithm, a certain amount of space is given over to aggregating and resaving the existing parity data used for error checking. So, in the event that data becomes corrupted, the parity data can be compared to the existing uncorrupted data and the content of the corrupted data can be rebuilt.

### 5.12 SMART Read Refresh<sup>™</sup>

Apacer's SMART Read Refresh plays a proactive role in avoiding read disturb errors from occurring to ensure health status of all blocks of NAND flash. Developed for read-intensive applications in particular, SMART Read Refresh is employed to make sure that during read operations, when the read operation threshold is reached, the data is refreshed by re-writing it to a different block for subsequent use.

#### **5.13 SATA Power Management**

By complying with SATA 6 Gb/s specifications, the SSD supports the following SATA power saving modes:

- ACTIVE: PHY ready, full power, TX & RX operational
- PARTIAL: Reduces power, resumes in under 10 µs (microseconds)
- SLUMBER: Reduces power, resumes in under 10 ms (milliseconds)
- HIPM: Host-Initiated Power Management
- DIPM: Device-Initiated Power Management
- AUTO-SLUMBER: Automatic transition from partial to slumber.
- Device Sleep (DevSleep or DEVSLP): PHY powered down; power consumption  $\leq 5$  mW; host assertion time  $\leq 10$  ms; exit timeout from this state  $\leq 20$  ms (unless specified otherwise in SATA Identify Device Log).

Note: The behaviors of power management features would depend on host/device settings.

## **6. Security and Reliability Features**

### 6.1 Advanced Encryption Standard

Advanced Encryption Standard (AES) is a specification for the encryption of electronic data. AES has been adopted by the U.S. government since 2001 to protect classified information and is now widely implemented in embedded computing applications. The AES algorithm used in software and hardware is symmetric so that encrypting/decrypting requires the same encryption key. Without the key, the encrypted data is inaccessible to ensure information security.

Notably in flash memory applications, AES 256-bit hardware encryption is the mainstream to protect sensitive or confidential data. The hardware encryption provides better performance, reliability, and security than software encryption. It uses a dedicated processor, which is built inside the controller, to process the encryption and decryption. This enormously shortens the processing time and makes it efficient.

### 6.2 TCG Opal (optional)

Developed by the Trusted Computing Group (TCG), an organization whose members work together to formulate industry standards, Opal is a set of security specifications used for applying hardware-based encryption to storage devices.

Hardware encryption has many advantages. First of all, it transfers the computational load of the encryption process to dedicated processors, reducing the stress on the host system's CPU. In addition, storage devices complying with Opal specifications are self-encryption devices. Opal specifications also feature boot authentication. When the drive is being accessed, the shadow MBR will request the drive password at boot. The drive will only unlock and decrypt if the correct password is supplied. The other feature is LBA-specific permissions. Users are assigned different permissions for LBA ranges created by the device administrator. Each LBA range is password-protected and can only be accessed by users with the correct key to perform permitted actions (read/write/erase).

#### 6.3 Thermal Sensor

Apacer Thermal Sensor is a digital temperature sensor with serial interface. By using a designated pin for transmission, storage device owners are able to read temperature data.

### 6.4 End-to-End Data Protection

End-to-End Data Protection is a feature implemented in Apacer SSD products that extends error control to cover the entire path from the host computer to the drive and back, and ensure data integrity at multiple points in the path to enable reliable delivery of data transfers. Unlike ECC which does not exhibit the ability to determine the occurrence of errors throughout the process of data transmission, End-to-End Data Protection allows SSD controller to identify an error created anywhere in the path and report the error to the host computer before it is written to the drive. This error-checking and error-reporting mechanism therefore guarantees the trustworthiness and reliability of the SSD.

## 7. Software Interface

### 7.1 Command Set

This section defines the software requirements and the format of the commands the host sends to SV250-M242. Commands are issued to SV250-M242 by loading the required registers in the command block with the supplied parameters, and then writing the command code to the Command register.

Code	Command	Code	Command
E5h	CHECK POWER MODE	F4h	SECURITY ERASE UNIT
06h	DATA SET MANAGEMENT	F5h	SECURITY FREEZE LOCK
92h	DOWNLOAD MICROCODE	F1h	SECURITY SET PASSWORD
90h	EXECUTE DEVICE DIAGNOSTIC	F2h	SECURITY UNLOCK
E7h	FLUSH CACHE	70h	SEEK
EAh	FLUSH CACHE EXT	EFh	SET FEATURES
ECh	IDENTIFY DEVICE	C6h	SET MULTIPLE MODE
E3h	IDLE	E6h	SLEEP
E1h	IDLE IMMEDIATE	B0h	SMART
91h	INITIALIZE DEVICE PARAMETERS	E2h	STANDBY
E4h	READ BUFFER	E0h	STANDBY IMMEDIATE
C8h	READ DMA	E8h	WRITE BUFFER
25h	READ DMA EXT	CAh	WRITE DMA
60h	READ FPDMA QUEUED	35h	WRITE DMA EXT
C4h	READ MULTIPLE	3Dh	WRITE DMA FUA EXT
29h	READ MULTIPLE EXT	61h	WRITE FPDMA QUEUED
2Fh	READ LOG EXT	3Fh	WRITE LOG EXT
47h	READ LOG DMA EXT	57h	WRITE LOG DMA EXT
20h	READ SECTOR	C5h	WRITE MULTIPLE
24h	READ SECTOR EXT	39h	WRITE MULTIPLE EXT
40h	READ VERIFY SECTORS	CEh	WRITE MULTIPLE FUA EXT
42h	READ VERIFY SECTORS EXT	30h	WRITE SECTOR
10h	RECALIBRATE	34h	WRITE SECTOR EXT
F6h	SECURITY DISABLE PASSWORD	45h	WRITE UNCORRECTABLE EXT
F3h	SECURITY ERASE PREPARE		

#### Table 7-1 Command Set

#### Table 7-2 Trusted Computing Feature Set

Code	Command	Code	Command
5Ch	TRUSTED RECEIVE	5Eh	TRUSTED SEND
5Dh	TRUSTED RECEIVE DMA	5Fh	TRUSTED SEND DMA

Note: This feature set is only applicable to products implemented with AES and Opal functions.

### 7.2 S.M.A.R.T.

S.M.A.R.T. is an abbreviation for Self-Monitoring, Analysis and Reporting Technology, a selfmonitoring system that provides indicators of drive health as well as potential disk problems. It serves as a warning for users from unscheduled downtime by monitoring and displaying critical drive information. Ideally, this should allow taking proactive actions to prevent drive failure and make use of S.M.A.R.T. information for future product development reference.

Apacer devices use the standard SMART command B0h to read data out from the drive to activate our S.M.A.R.T. feature that complies with the ATA/ATAPI specifications. S.M.A.R.T. Attribute IDs shall include initial bad block count, total later bad block count, maximum erase count, average erase count, power on hours and power cycle. When the S.M.A.R.T. Utility running on the host, it analyzes and reports the disk status to the host before the device reaches in critical condition.

Note: Attribute IDs may vary from product models due to various solution design and supporting capabilities.

Apacer memory products come with S.M.A.R.T. commands and subcommands for users to obtain information of drive status and to predict potential drive failures. Users can take advantage of the following commands/subcommands to monitor the health of the drive.

Code	SMART Subcommand
D0h	READ DATA
D1h	READ ATTRIBUTE THRESHOLDS
D2h	ENABLE/DISABLE ATTRIBUTE AUTOSAVE
D4h	EXECUTE OFF-LINE IMMEDIATE
D5h	SMART READ LOG
D6h	SMART WRITE LOG
D8h	ENABLE OPERATIONS
D9h	DISABLE OPERATIONS
DAh	RETURN STATUS

#### Table 7-3 SMART Subcommand Set

#### Table 7-4 General SMART Attribute Structure

Byte	Description
0	ID (Hex)
1 – 2	Status Flag
3	Value
4	Worst
5*-11	Raw Data

\*Byte 5: LSB

#### Table 7-5 SMART Attribute ID List

ID (Hex)	Attribute Name	
9 (0x09)	Power-on Hours	
12 (0x0C)	Power Cycle Count	
163 (0xA3)	Maximum Erase Count	
164 (0xA4)	Average Erase Count	
166 (0xA6)	Total Later Bad Block Count	
167 (0xA7)	SSD Protect Mode (Vendor Specific)	
168 (0xA8)	SATA PHY Error Count	
171 (0xAB)	Program Fail Count	
172 (0xAC)	Erase Fail Count	
175 (0xAF)	Bad Cluster Table Count	
192 (0xC0)	Unexpected Power Loss Count	
194 (0xC2)	Temperature	
231 (0xE7)	Lifetime Left	
241 (0xF1)	Total Sectors of Write	

## 8. Electrical Specifications

### 8.1 Operating Voltage

Table 8-1 lists the supply voltage for SV250-M242.

#### **Table 8-1 Operating Range**

ltem	Range
Supply Voltage	$3.3V \pm 5\%$

#### **8.2 Power Consumption**

Table 8-2 lists the power consumption for SV250-M242.

#### Table 8-2 Power Consumption (Unit: mA)

Capacity Mode	120 GB	240 GB	480 GB	960 GB
Active (Max.)	300	370	370	380
Idle	60	60	60	60

Notes:

• All values are typical and may vary depending on flash configurations or host system settings.

• Power consumption is measured using CrystalDiskMark 8.0.4.

# **9. Mechanical Specifications**

### 9.1 Dimensions

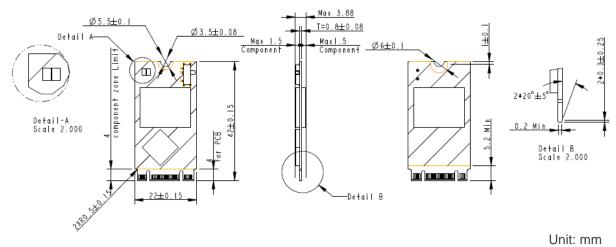


Figure 9-1 Physical Dimensions

### 9.2 Net Weight

Table 9-1 Net Weight

Capacity	Net Weight (g ± 5%)
120GB	3.45
240GB	3.86
480GB	3.54
960GB	3.65

# **10. Product Ordering Information**

## **10.1 Product Code Designations**

Apacer's SV250-M242 SSD is available in different configurations and densities. See the chart below for a comprehensive list of options for the SV250-M242 series devices.

Code	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Code	А	3	2		Х	Х	5	Х	Х	В		Х	Х	Х	Е	Х

Code 1-3 (Product Line & Form Factor)	SATA M.2 2242
Code 5-6 (Model/Solution)	25: SV250 A1: SV250 with TCG Opal
Code 7-8 (Product Capacity)	5H: 120GB 5J: 240GB 5K: 480GB 5L: 960GB
Code 9 (Flash Type & Product Temp)	G: 3D TLC Standard temperature H: 3D TLC Wide temperature
Code 10 (Product Spec)	Double Side B+M key
Code 12-14 (Version Number)	Random numbers generated by system
Code 15-16 (Firmware Version)	EM: Thermal Sensor DEVSLP OP Standard Temp EF: Thermal Sensor DEVSLP OP Wide Temp EE: Thermal Sensor DEVSLP TCG Opal OP Standard Temp EB: Thermal Sensor DEVSLP TCG Opal OP Wide Temp

### **10.2 Valid Combinations**

The following tables list the available models of the SV250-M242 series which are in mass production or will be in mass production. Consult your Apacer sales representative to confirm availability of valid combinations and to determine availability of new combinations.

#### 10.2.1 Without TCG Opal

Capacity	Standard Temperature	Wide Temperature
120GB	A32.255HGB.003EM	A32.255HHB.003EF
240GB	A32.255JGB.004EM	A32.255JHB.003EF
480GB	A32.255KGB.004EM	A32.255KHB.004EF
960GB	A32.255LGB.003EM	A32.255LHB.003EF

#### 10.2.2 With TCG Opal

Capacity	Standard Temperature	Wide Temperature
120GB	A32.A15HGB.002EE	A32.A15HHB.002EB
240GB	A32.A15JGB.002EE	A32.A15JHB.002EB
480GB	A32.A15KGB.002EE	A32.A15KHB.002EB
960GB	A32.A15LGB.001EE	A32.A15LHB.001EB

# **Revision History**

Revision	Description	Date
1.0	Initial release	11/29/2021
1.1	Updated endurance rating at Endurance on Specifications Overview page and Table 4-4	6/29/2022
1.2	- Added 120GB, 960GB, wide temperature and TCG Opal support	
	- Updated Performance, Endurance and Power Consumption on Specifications Overview page and Table 4-2, 4-4 and 8-2	
	- Updated warranty period from 2 years to 3 years at the notes for 4.6 Endurance	7/28/2022
	- Added 6.2 TCG Opal and Table 7-2	
	- Updated 10. Product Ordering Information by adding codes for 120GB and 960GB, wide temperature and firmware versions	
1.3	Modified the product photo at 4.7 LED Indicator Behavior	11/9/2022

## **Global Presence**

#### Taiwan (Headquarters)

Apacer Technology Inc. 1F., No.32, Zhongcheng Rd., Tucheng Dist., New Taipei City 236, Taiwan R.O.C. Tel: 886-2-2267-8000 Fax: 886-2-2267-2261 amtsales@apacer.com

#### Japan

Apacer Technology Corp. 6F, Daiyontamachi Bldg., 2-17-12, Shibaura, Minato-Ku, Tokyo, 108-0023, Japan Tel: 81-3-5419-2668 Fax: 81-3-5419-0018 jpservices@apacer.com

#### China

Apacer Electronic (Shanghai) Co., Ltd Room D, 22/FL, No.2, Lane 600, JieyunPlaza, Tianshan RD, Shanghai, 200051, China Tel: 86-21-6228-9939 Fax: 86-21-6228-9936

sales@apacer.com.cn

U.S.A. Apacer Memory America, Inc. 46732 Lakeview Blvd., Fremont, CA 94538 Tel: 1-408-518-8699 Fax: 1-510-249-9551 <u>sa@apacerus.com</u>

#### Europe

Apacer Technology B.V. Science Park Eindhoven 5051 5692 EB Son, The Netherlands Tel: 31-40-267-0000 Fax: 31-40-290-0686 sales@apacer.nl

#### India

Apacer Technologies Pvt Ltd, 1874, South End C Cross, 9<sup>th</sup> Block Jayanagar, Bangalore-560069, India Tel: 91-80-4152-9061/62 Fax: 91-80-4170-0215 sales india@apacer.com

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Apacer:

<u>A32.255HGB.003EM</u> <u>A32.255HHB.003EF</u> <u>A32.255JGB.004EM</u> <u>A32.255JHB.003EF</u> <u>A32.255KGB.004EM</u> A32.255KHB.004EF A32.255LGB.003EM A32.255LHB.003EF