

AEC-6613

Embedded Controller

Intel® Atom™ D2700 2.13GHz Processor

Dual LAN, 4 USB2.0, 4 COM, 1 VGA

1 Mini Card

Copyright Notice

This document is copyrighted, 2012. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its users.

Acknowledgments

All other products' name or trademarks are properties of their respective owners.

- AMI is a trademark of American Megatrends, Inc.
- CompactFlash™ is a trademark of the Compact Flash Association.
- Microsoft Windows® is a registered trademark of Microsoft Corp.
- Intel®, Atom™ are trademarks of Intel Corporation.
- PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before you begin operating your PC, please make sure that the following materials are enclosed:

- 1 AEC-6613 Embedded Controller
- 2 Wallmount Brackets
- 1 Screw Package
- 1 CD-ROM for manual (in PDF format) and drivers
- 1 Phoenix Power Connector
- 1 Heat Spreader

If any of these items should be missing or damaged, please contact your distributor or sales representative immediately.

Safety & Warranty

1. Read these safety instructions carefully.
2. Keep this user's manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Do not use liquid or spray detergents for cleaning. Use a damp cloth.
4. For pluggable equipment, the power outlet must be installed near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a firm surface during installation. Dropping it or letting it fall could cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over-voltage.
12. Never pour any liquid into an opening. This could cause fire or electrical shock.
13. Never open the equipment. For safety reasons, only qualified service personnel should open the equipment.
14. If any of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.

- d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
15. DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -20°C (-4°F) OR ABOVE 70°C (158°F). IT MAY DAMAGE THE EQUIPMENT.

FCC

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Below Table for China RoHS Requirements

产品中有毒有害物质或元素名称及含量

AAEON Boxer/ Industrial System

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	×	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
电源	×	○	○	○	○	○
<p>O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。</p> <p>X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。</p> <p>备注： 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。 二、上述部件物质中央处理器、内存、硬盘、电源为选购品。</p>						

Chapter 1 General Information

1.1 Introduction.....	1-2
1.2 Features	1-3
1.3 Specifications	1-4

Chapter 2 Hardware Installation

2.1 Dimension and I/O of AEC-6613.....	2-2
2.2 Location of Connectors and Jumpers of the Main Board	2-6
2.3 List of Jumpers	2-8
2.4 List of Connectors	2-9
2.5 COM Port 1 Connector.....	2-11
2.6 COM Port 2 Connector.....	2-11
2.7 COM Port 3 Connector.....	2-12
2.8 COM Port 4 Connector.....	2-12
2.9 Hard Disk Drive Installation.....	2-13
2.10 SD RAM Installation	2-17
2.11 DIN Rail Installation.....	2-23
2.12 Wallmount Installation	2-24

Chapter 3 AMI BIOS Setup

3.1 System Test and Initialization.	3-2
3.2 AMI BIOS Setup.....	3-3

Chapter 4 Driver Installation

4.1 Installation	4-3
------------------------	-----

Appendix A Programming The Watchdog Timer

A.1 Programming	A-2
A.2 ITE8783 Watchdog Timer Initial Program	A-6

Appendix B I/O Information

B.1 I/O Address Map	B-2
B.2 1 st MB Memory Address Map	B-4
B.3 IRQ Mapping Chart	B-5
B.4 DMA Channel Assignments	B-6

Appendix C AHCI Setting

C.1 Setting AHCI	C-2
------------------------	-----

Chapter

1

**General
Information**

1.1 Introduction

AAEON introduces the newest product in the Boxer series, AEC-6613, which utilizes the Intel® Atom™ D2700 processor: this embedded controller expands its graphics performance greatly with the newest generation of Atom™ processors.

In this era of information explosion, the advertising of consumer products will not be confined to the family television, but will also spread to high-traffic public areas, like department stores, the bus, transportation station, the supermarket etc. The advertising marketing industry will resort to every conceivable mean to transmit product information to consumers. System integrators will need a multifunction device to satisfy commercial needs for such public advertising.

The AEC-6613 is a standalone high performance controller designed for long-life operation and with high reliability. It can replace traditional methods and become the mainstream controller for the multimedia entertainment market.

1.2 Features

- Intel® Atom™ D2700 2.13 GHz Processor
- Intel® NM10 Express chipset
- Intel® GMA 3650 Integrated Graphic Engine
- USB2.0 x 4
- COM x 4
- Dual Gigabit Ethernet LAN
- VGA Output
- Fanless System Design

1.3 Specifications

System

- CPU Intel® Atom™ D2700 2.13 GHz Processor
- Memory DDR3 800/1066 SODIMM x 1, Max. 4GB)
- VGA VGA x 1 (optional 2nd VGA)
- Ethernet Gigabit Ethernet, RJ-45 connector x 2
- Hard Disk Storage 2.5" SATA HDD Bay x 1
- Expansion Mini Card Slot x 1
- LCD/CRT Controller Integrated in Processor, shared system memory by Intel® DVMT Technology
- Solid Storage Disk CFAST™ slot x 1 (w/ cover protection)
- Serial Port RS-232/422/485 x 1, RS-232 x 3 (optional x 2)
- USB USB 2.0 x 4
- System Control Power ON/OFF
- LED Indicator Power LED x 1, Hard disk active LED x 1, CFAST™ slot x 1, Antenna hole x 2
- Power Supply DC power input 12V/ DC 9-30V w/ 3-pin terminal block
- OS Support Windows® 7, Linux Fedora Core, Windows® XP (chipset and VGA driver will be launched in 2012 Q3)

Mechanical and Environmental

- Construction Aluminum Alloy Chassis
- Color Dark Gray


- Mounting Wallmount
- Dimension 8.35”(W) x 3.1”(H) x 2.25”(D)
(212.15 mm x 78.88 mm x 107 mm)
- Gross Weight 8.36 lb (3.8 kg)
- Net Weight 4.75 lb (2.16 kg)
- Operating Temperature
No Airflow:
32°F ~ 122°F (0°C ~ 50°C) (HDD)
32°F ~ 131°F (0°C ~ 55°C) (CFast™ Card)
Ambient with Airflow:
32°F ~ 131°F (0°C ~ 55°C) (HDD)
32°F ~ 140°F (0°C ~ 60°C) (CFast™ Card)
- Storage Temperature -4°F ~ 158°F (-20°C ~ 70°C)
- Storage Humidity 5 ~ 95% @ 40°C, non-condensing
- Vibration 5 g rms/ 5~500Hz/ random operation –CFast™
1 g rms/ 5~500Hz/ random operation –HDD
- Shock 50 G peak acceleration (11msec. duration) –CFast™
20 G peak acceleration (11msec. duration) –HDD
- EMC CE/FCC Class A

Chapter


2

Hardware Installation


AEC-6613-A1M

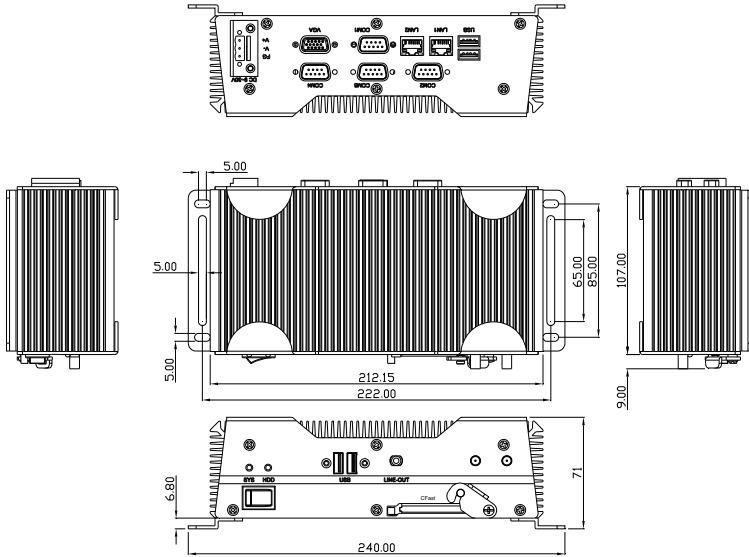

AEC-6613-A2

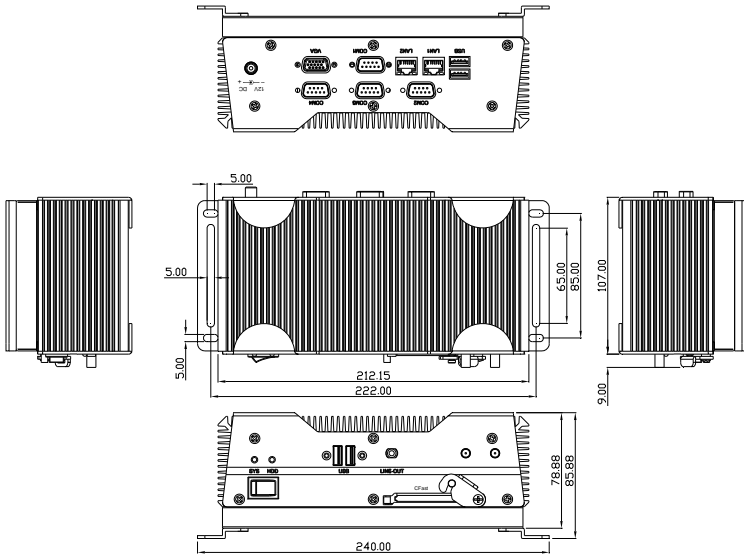


AEC-6613-A2M

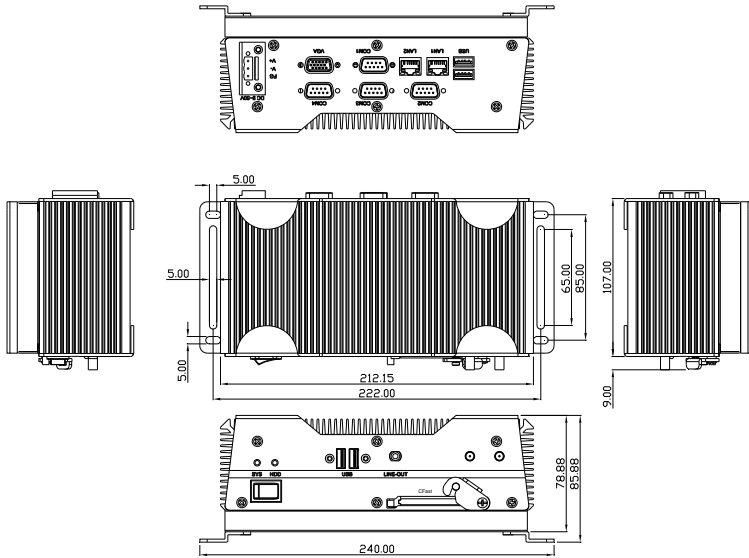


2.2 Connectors and Jumpers of The Main Board

Component Side

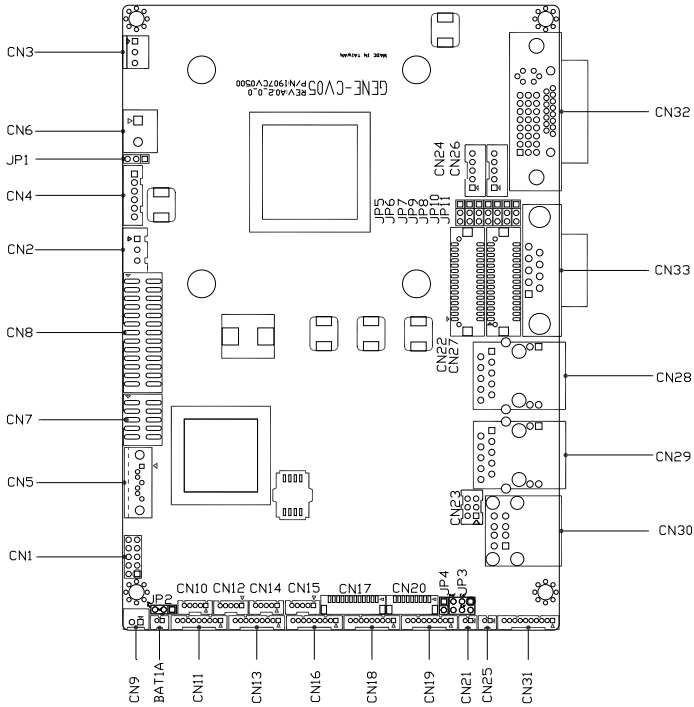

Solder Side

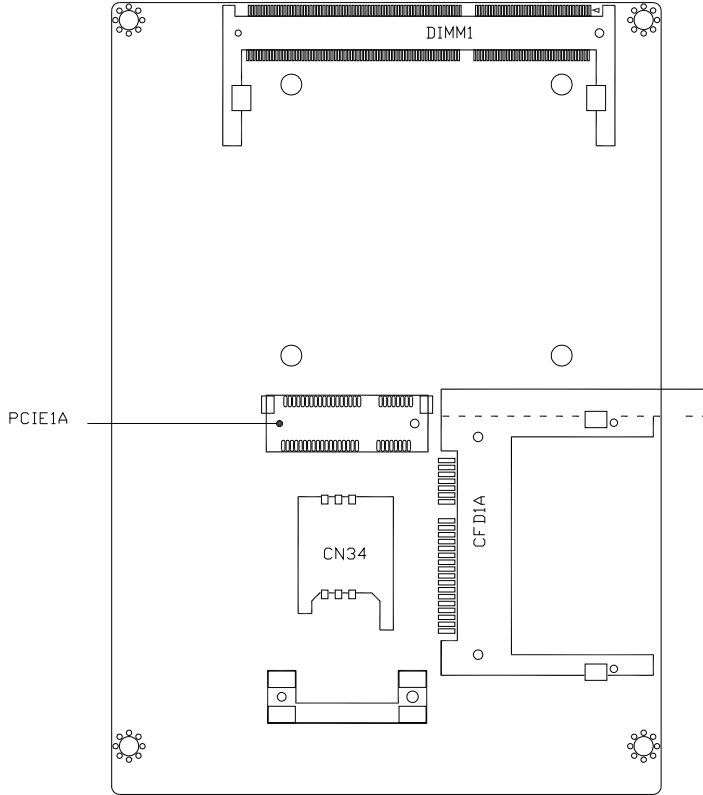

2.3 List of Jumpers

The board has a number of jumpers that allow you to configure your system to suit your application.

The table below shows the function of each of the board's jumpers:

Label	Function
JP1	Auto Power Button Selection
JP2	Clear CMOS
JP3	COM2 RI/+5/+12V Selection
JP4	Touch Screen 4/5/8-wires Mode Selection
JP5	Brightness Control for 2nd LVDS
JP6	2nd LVDS Backlight Bias/PWM Mode Selection
JP7	2nd LVDS Operating Voltage Selection
JP8	2nd LVDS Inverter Voltage Selection
JP9	1st LVDS Inverter Voltage Selection
JP10	1st LVDS Backlight Bias/PWM Mode Selection
JP11	1st LVDS Operating Voltage Selection

2.4 List of Connectors

The board has a number of connectors that allow you to configure your system to suit your application. The table below shows the function of each board's connectors:

Label	Function
CN1	Front Panel
CN2	External +5VSB Input
CN3	CPU FAN
CN4	+5VSB Output w/ SMBus
CN5	SATA Port
CN6	External 12V Input
CN7	Digital I/O
CN8	Parallel Port
CN9	+5V Output for SATA HDD usage
CN10	USB Port #6
CN11	COM Port #6
CN12	USB Port #5
CN13	COM Port #5
CN14	USB Port #4
CN15	USB Port #3
CN16	COM Port #4
CN17	LPC Expansion I/F
CN18	COM Port #3
CN19	Touch Screen
CN20	COM Port #2
CN21	Stereo-R Channel
CN22	2nd LVDS (Dual channel 18/24bit)
CN23	PS/2 Keyboard & Mouse
CN24	2nd LVDS Inverter

CN25	Stereo-L Channel
CN26	1st LVDS Inverter
CN27	1st LVDS (Single channel 18/24bit)
CN28	2nd RJ-45 Ethernet
CN29	1st RJ-45 Ethernet
CN30	USB Port #1 and #2
CN31	Audio Line In/Out and MIC
CN32	CRT/DVI (Configured by manufacturing)
CN33	COM Port #1
CN34	SIM Card Socket
CFD1	CFAST™
PCIE1	Mini Card/mSATA (Configured by manufacturing)
DIMM1	DDR3 SODIMM Slot

2.5 COM Port 1 Connector

Pin	Signal	Pin	Signal
1	DCDA	2	RXA
3	TXA	4	DTRA
5	Ground	6	DSRA
7	RTSA	8	CTSA
9	RIA		

2.6 COM Port 2 Connector

RS-232 Mode

Pin	Signal	Pin	Signal
1	DCDB	2	DSRB
3	RXB	4	RTSB
5	TXB	6	CTSB
7	DTRB	8	RIB/+5V/(+12V)
9	Ground		

RS-422 Mode

Pin	Signal	Pin	Signal
1	TXD-	2	N/C
3	RXD+	4	N/C
5	TXD+	6	N/C
7	RXD-	8	N/C / +5V / (+12V)
9	Ground		

RS-485 Mode

Pin	Signal	Pin	Signal
1	TXD-	2	N/C
3	N/C	4	N/C
5	TXD+	6	N/C
7	N/C	8	N/C / +5V / (+12V)
9	Ground		

2.7 COM Port 3 Connector

Pin	Signal	Pin	Signal
1	DCDC	2	DSRC
3	RXC	4	RTSC
5	TXC	6	CTSC
7	DTRC	8	RIC
9	Ground		

2.8 COM Port 4 Connector

Pin	Signal	Pin	Signal
1	DCDD	2	DSRD
3	RXD	4	RTSD
5	TXD	6	CTSD
7	DTRD	8	RID
9	Ground		


Step 3: Install the CFast™ card.




Step 4: Fasten the cover of the CFast™ card.



Step 5: Stack the HDD and bracket. Fasten the HDD and bracket with the screws.

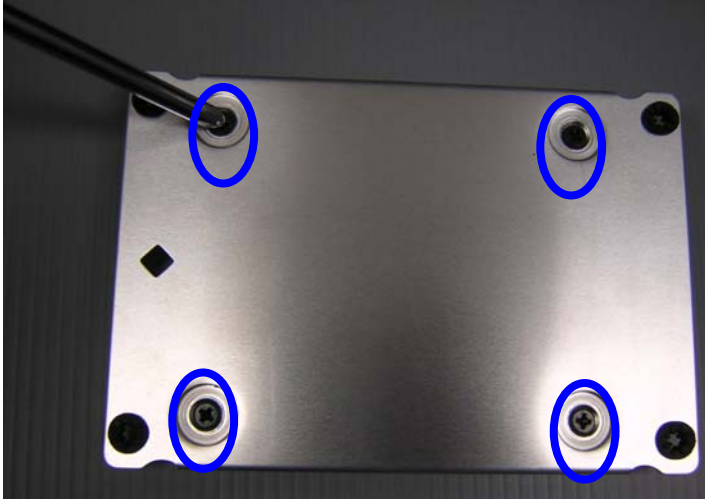

Step 6: Connect the SATA and power cables to the HDD.

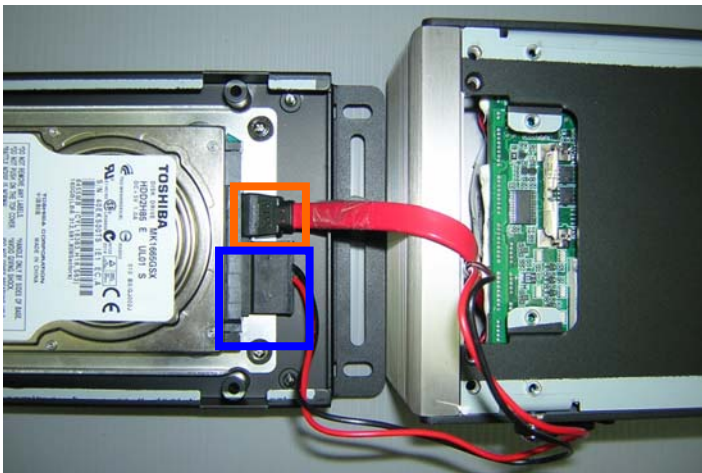

Step 7: Fasten the bracket of the HDD.



Step 8: Fasten the bottom HDD kit case of AEC-6613.




2.10 SD RAM Installation

Step 1: Loosen the bottom HDD kit of the AEC-6613.




Step 2: Fasten the bottom case of the AEC-6613.

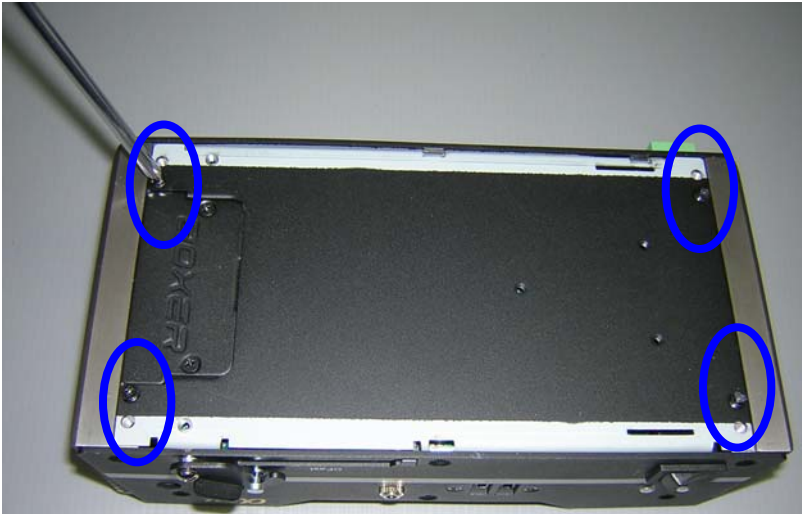

Step 3: Loosen the screw on the front panel of AEC-6613




Step 4: Loosen the screws on the rear panel of AEC-6613

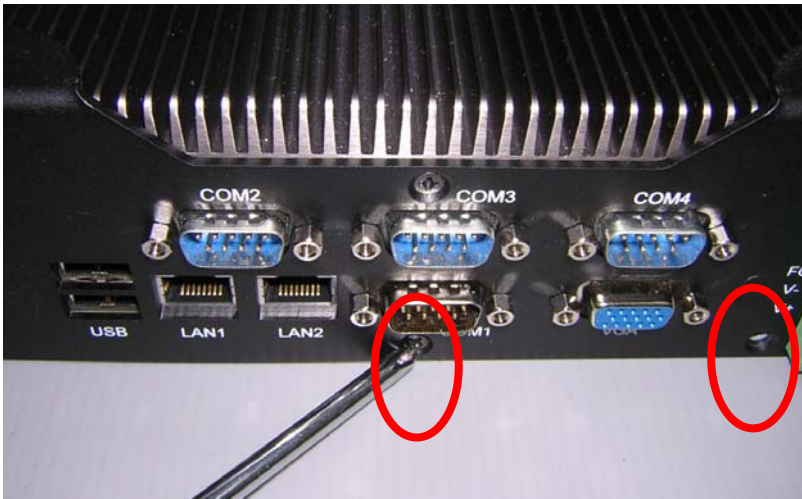

Step 5: Insert the SDRAM to the memory slot.




Step 6: Press the SDRAM and make sure that it has been inserted properly.

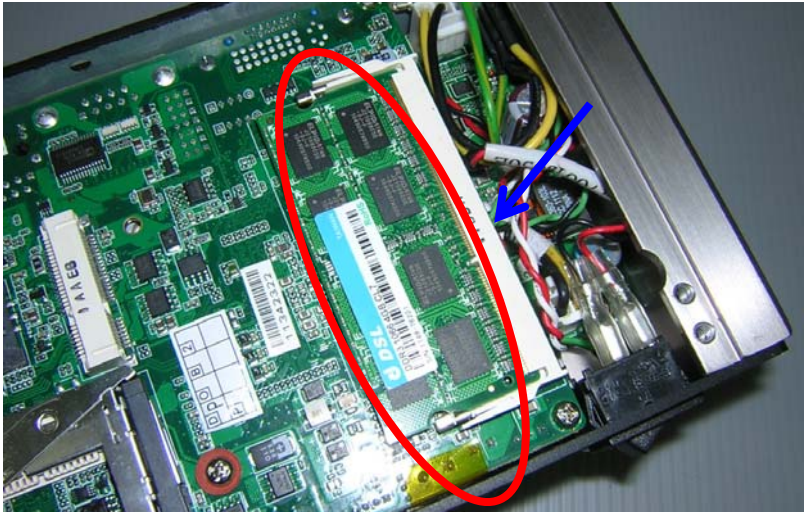

Step 7: Adhere the heat-spreading sheet to the SDRAM.



Step 8: Close the bottom case of AEC-6613 and fasten the four screws on the bottom case.

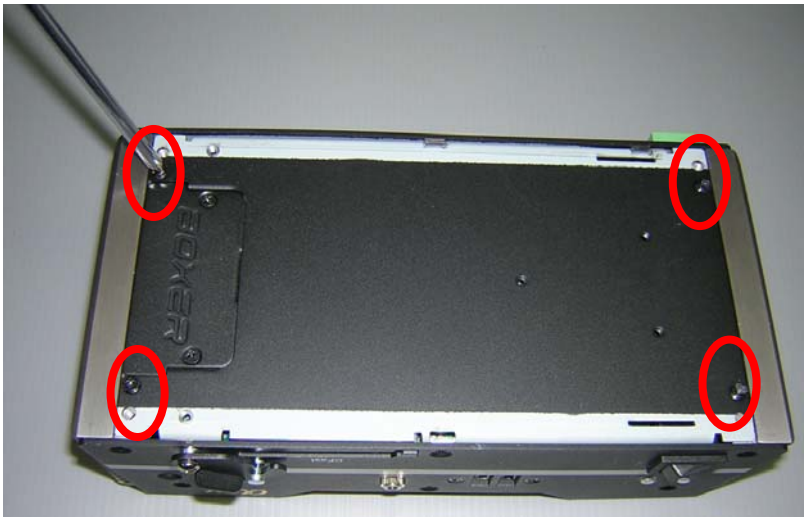


Step 8-1: Close the bottom HDD kit case of AEC-6613 and fasten the two screws on the bottom case.



Step 9: Close the front case of AEC-6613 and fasten the screw on the front case.




Step 10: Close the rear case of AEC-6613 and fasten the two screws on the rear case.

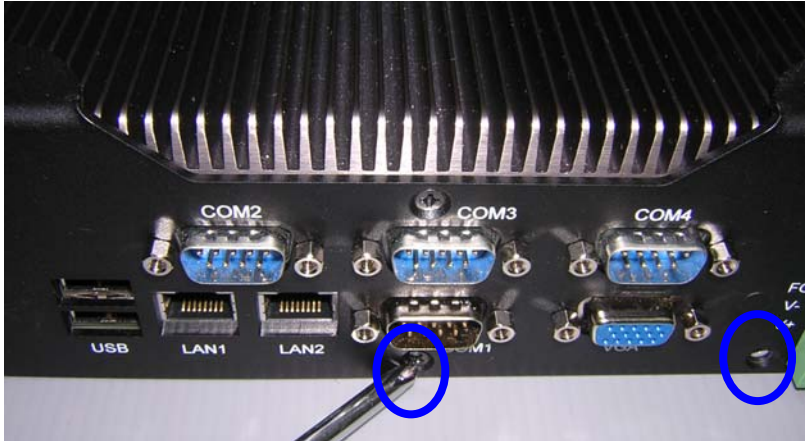


2.11 DIN Rail Installation

Step 1: Fix the DIN Rail kit with the screws on the chassis as shown below.


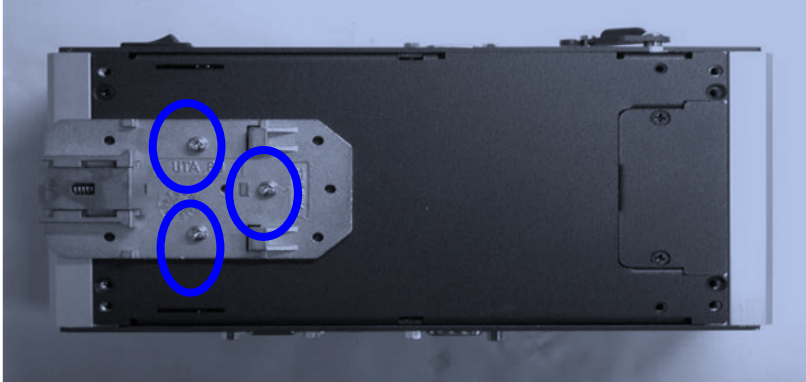


Step 2: Press the DIN Rail on the DIN Rail kit to fix it.

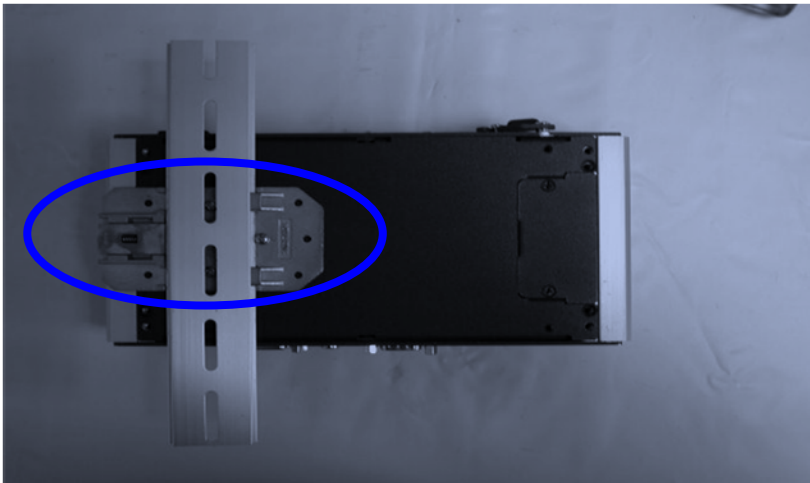

2.12 Wallmount Installation

Step 1: Fasten the brackets with the screws.

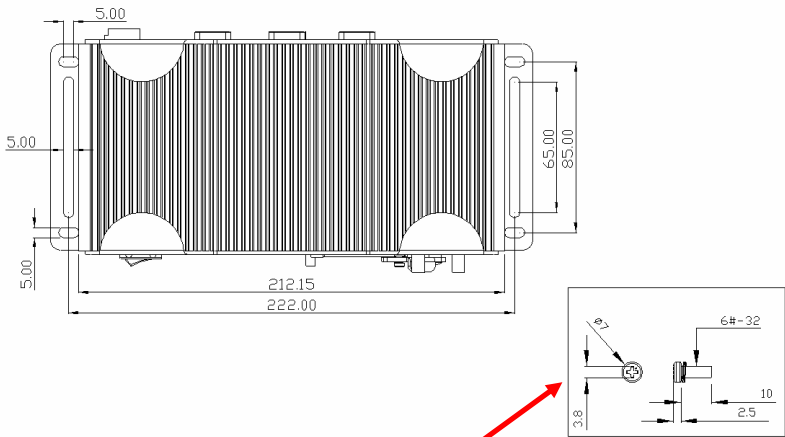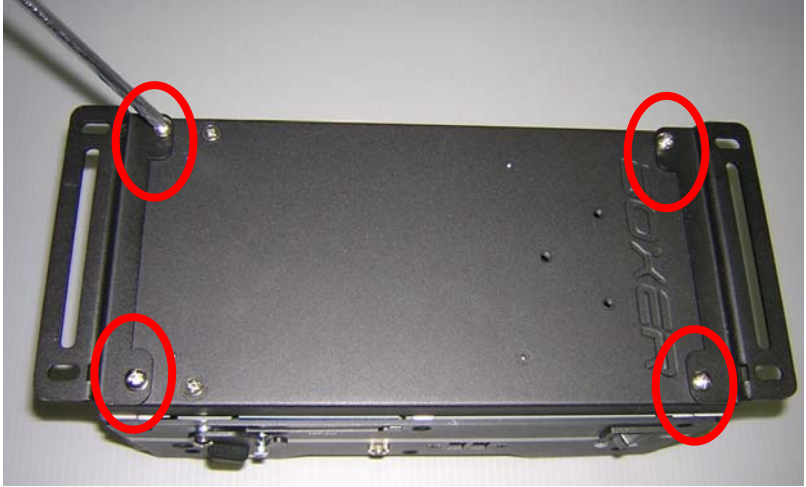

We suggest using this screw.

Chapter

3

**AMI
BIOS Setup**

3.1 System Test and Initialization

These routines test and initialize board hardware. If the routines encounter an error during the tests, you will either hear a few short beeps or see an error message on the screen. There are two kinds of errors: fatal and non-fatal. The system can usually continue the boot up sequence with non-fatal errors.

System configuration verification

These routines check the current system configuration against the values stored in the CMOS memory. If they do not match, the program outputs an error message. You will then need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

1. You are starting your system for the first time
2. You have changed the hardware attached to your system
3. The CMOS memory has lost power and the configuration information has been erased.

The AEC-6613 CMOS memory has an integral lithium battery backup for data retention. However, you will need to replace the complete unit when it runs down.

3.2 AMI BIOS Setup

AMI BIOS ROM has a built-in Setup program that allows users to modify the basic system configuration. This type of information is stored in battery-backed CMOS RAM so that it retains the Setup information when the power is turned off.

Entering Setup

Power on the computer and press or <F2> immediately. This will allow you to enter Setup.

Main

Set the date, use tab to switch between date elements.

Advanced

Advanced BIOS Features Setup including TPM, ACPI, etc.

Chipset

Host bridge parameters.

Boot

Enables/disable quiet boot option.

Security

Set setup administrator password.

Save&Exit

Exit system setup after saving the changes.

Setup Menu

Setup submenu: Main

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Main Advanced Chipset Boot Security Save & Exit

BIOS Information
AEC-6613 R1.2(6613AM12) (02/06/2013)

BIOS Vendor American Megatrends
Core Version 4.6.5.1
Compliance UEFI 2.3; PI 1.2

System Date [Wed 02/06/2013]
System Time [14:32:19]

Access Level Administrator

Set the Date. Use Tab to switch between Data elements.


++: Select Screen
 ↑: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: (**default setting**)

System Date	Day MM:DD:YYYY	
Change the month, year and century. The 'Day' is changed automatically.		
System Time	HH : MM : SS	
Change the clock of the system.		

Setup submenu: Advanced

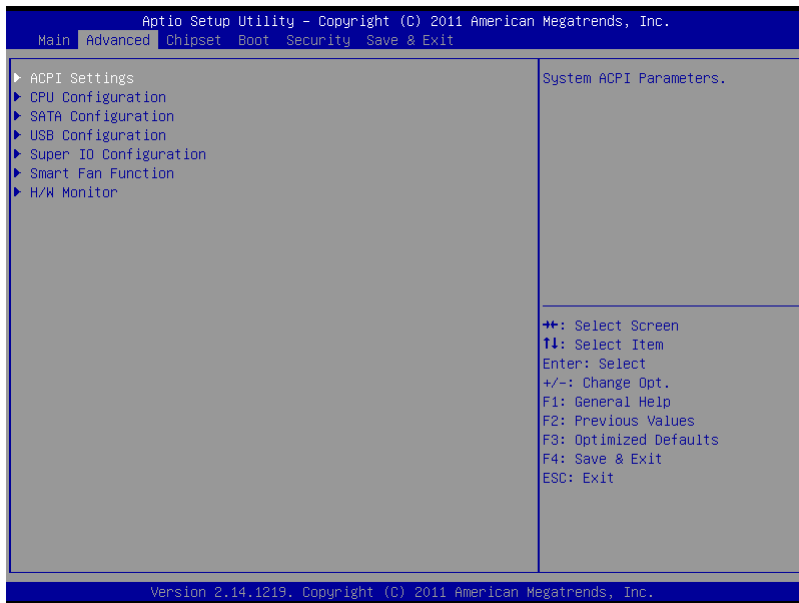

Options summary: **(default setting)**

ACPI Settings		
System ACPI Parameters		
CPU Configuration		
CPU Configuration Parameters		
SATA Configuration		
SATA Device Options Settings		
USB Configuration		
USB Configuration Parameters		
Super IO Configuration		

IT8783 Super IO Configuration Parameters		
Smart Fan Function		
Smart Fan Function settings		
H/W Monitor		
Monitor hardware status		

ACPI Settings

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

<p>ACPI Settings</p> <p>ACPI Sleep State [S3 (Suspend to RAM)]</p>	<p>Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.</p> <hr/> <p> ++: Select Screen T↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	--

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: **(default setting)**

ACPI Sleep State	Suspend Disabled	
	S3 (Suspend to RAM)	
Select the ACPI state used for System Suspend		

CPU Configuration

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

CPU Configuration		Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). ⇧⇩: Select Screen ⚡: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Processor Type	Intel(R) Atom(TM) CPU Supported	
EMT64	Supported	
Processor Speed	1865 MHz	
System Bus Speed	533 MHz	
Ratio Status	14	
Actual Ratio	14	
System Bus Speed	533 MHz	
Processor Stepping	30661	
Microcode Revision	269	
L1 Cache RAM	2x56 k	
L2 Cache RAM	2x512 k	
Processor Core	Dual	
Hyper-Threading	Supported	
Hyper-Threading	[Enabled]	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: (default setting)

Hyper-Threading	Disabled	
	Enabled	
CPU Hyper-Threading Technology support or not		

SATA Configuration

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

SATA Port0	Not Present	SATA Ports (0-3) Device Names if Present and Enabled.
SATA Port1	Not Present	
SATA Controller(s)	[Enabled]	
Configure SATA as	[AHCI]	
SATA Port 0	[Enabled]	
SATA Port 0 Hot Plug	[Enabled]	
SATA Port 1	[Enabled]	
SATA Port 1 Hot Plug	[Enabled]	
Misc Configuration for hard disk		
		++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: (*default setting*)

SATA Controller(s)	Enabled	
	Disabled	
SATA Controller Enable/Disable		
SATA Mode	IDE	
	AHCI	
Configure SATA controller operating as IDE/AHCI mode.		
SATA PORTx	Enabled	
	Disabled	
Enable / Disable SATA Portx		

SATA Portx Hot Plug	Enabled	
	Disabled	
Enable / Disable SATA Portx Hot Plug function		

USB Configuration

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

<p>USB Configuration</p> <p>USB Devices: 1 Drive, 1 Keyboard</p> <p>Legacy USB Support [Enabled]</p> <p>Mass Storage Devices: JetFlashTranscend 4GB 1100 [Auto]</p>	<p>Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.</p> <p>++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit</p>
---	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: *(default setting)*

Legacy USB Support	Enabled	
	Disabled	
	Auto	
Enables BIOS Support for Legacy USB Support. When enabled, USB can be functional in legacy environment like DOS. AUTO option disables legacy support if		

Options summary: *(default setting)*

Serial Port x Configuration		
Set Parameters of Serial Port x		
Parallel Port Configuration		
Set Parallel Port Configuration		
Restore AC Power Loss	Power off	
	Power on	
	Last State	
Set Power on after power fail function		

Serial Port 2 Configuration

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

<p>Serial Port 2 Configuration</p> <p>Serial Port [Enabled]</p> <p>Device Settings IO=2F8h; IRQ=3;</p> <p>Change Settings [Auto]</p> <p>COM2 Type Select [RS232]</p>	<p>Enable or Disable Serial Port (COM)</p> <hr/> <p> ++: Select Screen ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: (*default setting*)

Serial Port	Disabled	
	Enabled	
En/Disable specified serial port.		
Change Settings	Auto	
	IO=2F8h; IRQ=3;	
	IO=3F8h; IRQ=3,4,5,7,10,11,12;	
	IO=2F8h; IRQ=3,4,5,7,10,11,12;	
	IO=3E8h; IRQ=3,4,5,7,10,11,12;	
	IO=2E8h; IRQ=3,4,5,7,10,11,12;	
Select a resource setting for Super IO device.		
COM2 Type Option	RS232	
	RS422	
	RS485	
Configure COM2 operated as RS232, RS422 or RS485.		

Smart Fan Function

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Advanced

<p>Pc Health Status</p> <p>Smart Fan 1 Mode [Full on Mode]</p>	<p>Smart Fan 1 Mode Select</p> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
--	---

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Smart Fan 1 Mode	Full on mode	
	Automatic Mode	
	Manual Mode	
Smart Fan 1 Mode Select		

H/W Monitor

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.


Advanced

Pc Health Status	
CPU temperature	: +51 C
SB temperature	: +48 C
System temperature	: +49 C
Fan1 Speed	: N/A
Vcore	: +1.081 V
Vcc 1.5V	: +1.524 V
Vcc 3.3V	: +3.363 V
Vcc 5V	: +5.186 V
Vcc 12V	: +12.097 V
5V Dual	: +5.140 V
VBAT	: +3.238 V

⇧⇩: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F2: Previous Values
 F3: Optimized Defaults
 F4: Save & Exit
 ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Setup submenu: Chipset

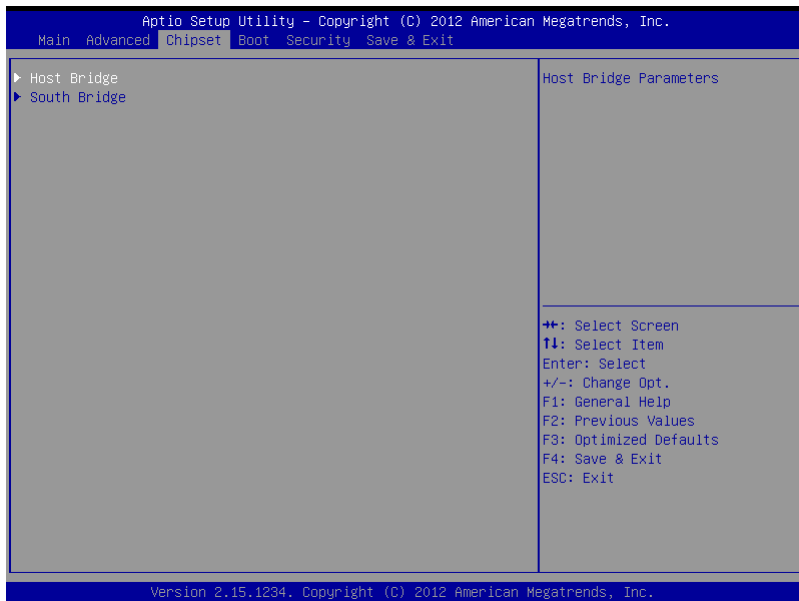

Options summary: **(default setting)**

Host Bridge		
Host Bridge Parameters		
South Bridge		
South Bridge Parameters		

Intel IGD Configuration

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Chipset

Intel IGD Configuration Auto Disable IGD [Enabled] IGFX - Boot Type [VBIOS Default] Fixed Graphics Memory Size [256MB]	Auto disable IGD upon external GFX detected.
++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit	

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: **(default setting)**

Auto Disable IGD	Disabled	
	Enabled	
Support Auto Disable IGD		
IGFX – Boot Type	VBIOS Default	
Select the Video Device which will be activated during POST		
Fixed Graphics Memory	128MB	
Size	256MB	
Configure Fixed Graphics Memory Size		

South Bridge

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Chipset


Power Mode [ATX Type]	Enable or disable 'It is now safe to turn off your computer.' string
<ul style="list-style-type: none"> ▶ TPT Devices ▶ PCI Express Root Port 0 ▶ PCI Express Root Port 1 ▶ PCI Express Root Port 2 ▶ PCI Express Root Port 3 	+/: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: (*default setting*)

Power Mode		
Select AT/ATX Power Mode		
TPT Devices		
Configure onboard TPT Devices		
PCI Express Port x	Disabled	
	Enabled	
Enable/Disable PCI Express Port 0 - 3		

TPT Devices

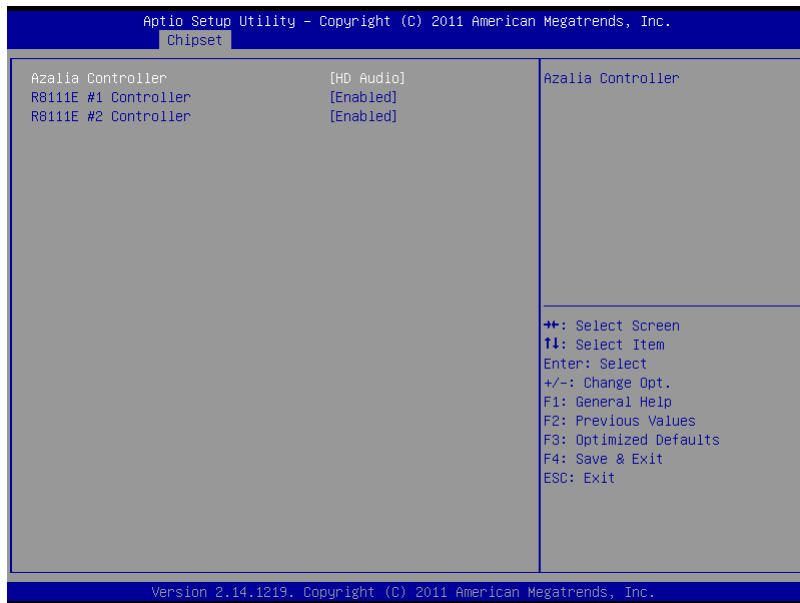

Options summary: (*default setting*)

Azalia Controller	Disabled	
	HD Audio	
Azalia Controller Enable/Disable		
R8111E #x Controller	Disabled	
	Enabl	
R8111E Enable/Disable		

Boot Configuration

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.

Main Advanced Chipset **Boot** Security Save & Exit


Boot Configuration Quiet Boot [Enabled] Launch 8111E PXE OpROM [Disabled] Boot Option Priorities Boot Option #1 [UEFI: Generic STOR...] Boot Option #2 [Generic STORAGE DE...] Hard Drive BBS Priorities	Enables or disables Quiet Boot option ++: Select Screen ↑: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
--	--

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.

Options summary: (default setting)

Quiet Boot	Disabled	
	Enabled	
Enables or disables Quiet Boot option		
Launch 8111E PXE OpROM	Disabled	
	Enabled	
En/Disable PXE boot for onboard 8111E LAN		
Boot Option #X		
XXXX Drive BBS Priorities		
The order of boot priorities.		

BBS Priorities

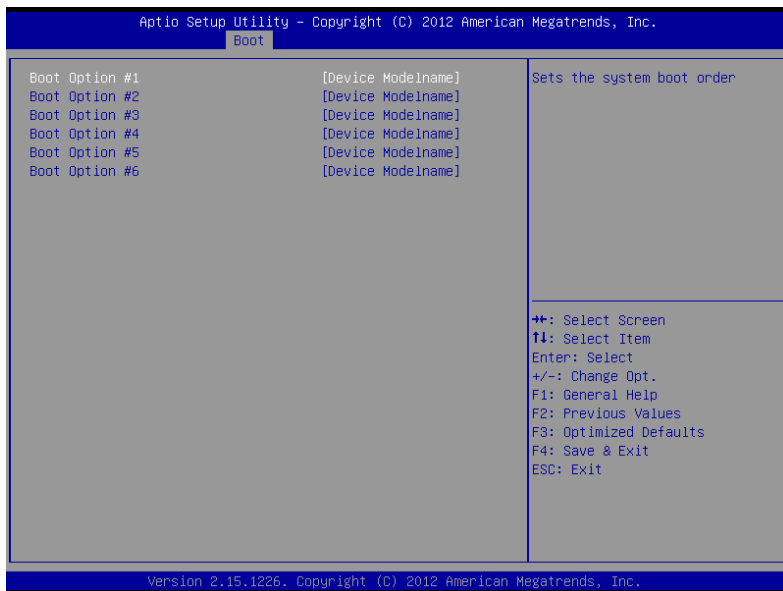

Options summary: (*default setting*)

Boot Option #x	Disabled	
	Device name	
Sets the system boot order		

Setup submenu: Security

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.

Main Advanced Chipset Boot **Security** Save & Exit

<p>Password Description</p> <p>If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.</p> <p>If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights.</p> <p>The password length must be in the following range:</p> <table style="width: 100%; border: none;"> <tr> <td style="padding-right: 20px;">Minimum length</td> <td style="text-align: right;">3</td> </tr> <tr> <td>Maximum length</td> <td style="text-align: right;">20</td> </tr> </table> <p>Administrator Password User Password</p>	Minimum length	3	Maximum length	20	<p>Set Administrator Password</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </p>
Minimum length	3				
Maximum length	20				

Version 2.15.1234. Copyright (C) 2012 American Megatrends, Inc.

Options summary: **(default setting)**

Administrator Password/	Not set	
User Password		

You can install a Supervisor password, and if you install a supervisor password, you can then install a user password. A user password does not provide access to many of the features in the Setup utility.

Install the Password:


Press Enter on this item, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is

required at boot time, or when the user enters the Setup utility.

Removing the Password:

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

HDD Security

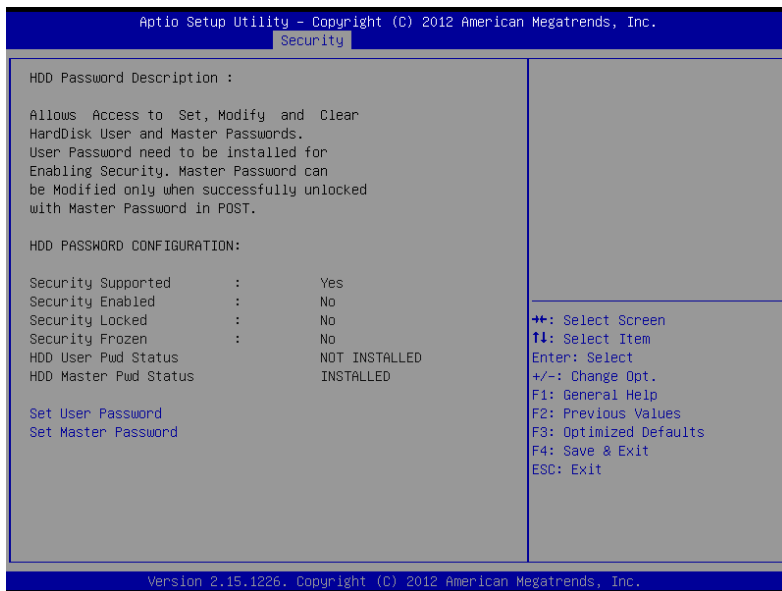

Options summary: (default setting)

Set User Password/	Not set	
Set Master Password		

You can install a Master and User password. Before booting to OS, HDD will be set to frozen state. On S3 resume HDD will be unlocked using the HDD Password we entered while system booting.

Install the Password:


Press Enter on this item, a dialog box appears which lets you enter a password. You can enter no more than six letters or numbers. Press Enter after you have typed in the password. A second dialog box asks you to retype the password for confirmation. Press Enter after you have retyped it correctly. The password is

required at boot time, or when the user enters the Setup utility.

Removing the Password:

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

Setup submenu: Exit

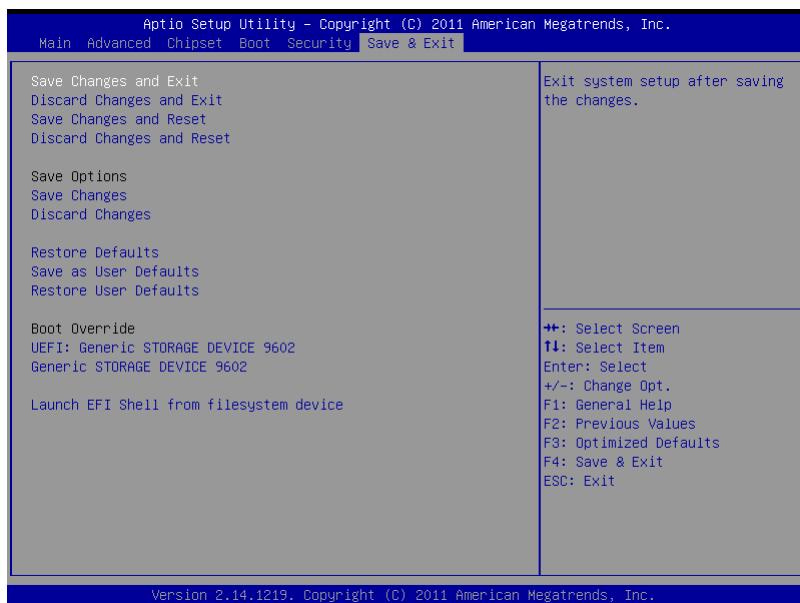

Options summary: **(default setting)**

Save Changes and Reset		
Reset the system after saving the changes		
Discard Changes and Reset		
Reset system setup without saving any changes		

Restore Defaults		
Restore/Load Default values for all the setup options.		
Save as User Defaults		
Save the changes done so far as User Defaults		
Restore User Defaults		
Restore the User Defaults to all the setup options		

Chapter

4

**Driver
Installation**

The AEC-6613 comes with a CD-ROM that contains all drivers and utilities that meet your needs.

Follow the sequence below to install the drivers:

Step 1 – Install Chipset Driver

Step 2 – Install VGA Driver

Step 3 – Install LAN Driver

Step 4 – Install Audio Driver

Step 5 – Install AHCI Driver

4.1 Installation:

Insert the AEC-6613 CD-ROM into the CD-ROM drive, and then install the drivers from Step 1 to Step 5 in order.

Step 1 – Install Chipset Driver

1. Click on the **STEP1-CHIPSET** folder and select the OS folder your system is
2. Double click on the **.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 2 – Install VGA Driver

1. Click on the **STEP2-VGA** folder and select the OS folder your system is
2. Double click on the **Setup.exe** located in **WIN7_32** folder or **WindowsDriverSETUP.bat** located in **WINXP_32** folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 3 – Install LAN Driver

1. Click on the **STEP3-LAN** folder and select the OS folder your system is
2. Double click on the **setup.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 4 – Install Audio Driver

1. Click on the **STEP4-AUDIO** folder and select the OS folder your system is
2. Double click on the **Setup.exe** located in each OS folder
3. Follow the instructions that the window shows
4. The system will help you install the driver automatically

Step 5 – Install AHCI Driver

1. Please refer to the Appendix C AHCI settings.

Appendix

A


Programming the Watchdog Timer

A.1 Programming

AEC-6613 utilizes the ITE 8783 chipset as its watchdog timer controller. Below are the procedures to complete its configuration and the AAeon initial watchdog timer program is also attached based on which you can develop customized program to fit your application.

Configuring Sequence Description

After the hardware reset or power-on reset, the ITE 8783 enters the normal mode with all logical devices disabled except KBC. The initial state (enable bit) of this logical device (KBC) is determined by the state of pin 121 (DTR1#) at the falling edge of the system reset during power-on reset.

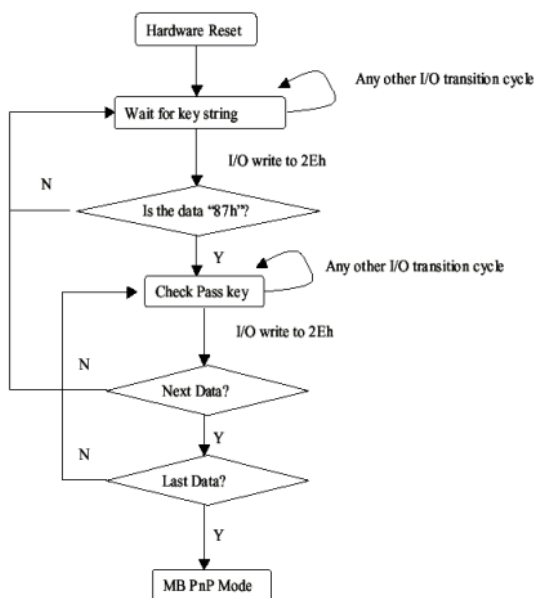

There are three steps to complete the configuration setup: (1) Enter the MB PnP Mode; (2) Modify the data of configuration registers; (3)

Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.

(1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to be performed during Wait for Key state. To ensure the initial state of the key-check logic, it is necessary to perform four write operations to the Special Address port (2EH). Two different enter keys are provided to select configuration ports (2Eh/2Fh) of the next step.

	Address Port	Data Port
87h, 01h, 55h, 55h:	2Eh	2Fh

(2) Modify the Data of the Registers

All configuration registers can be accessed after entering the MB PnP Mode. Before accessing a selected register, the content of Index 07h must be changed to the LDN to which the register belongs, except some Global registers.

(3) Exit the MB PnP Mode

Set bit 1 of the configure control register (Index=02h) to 1 to exit the MB PnP Mode.

WatchDog Timer Configuration Registers

LDN	Index	R/W	Reset	Configuration Register or Action
All	02h	W	NA	Configure Control

07h	71h	R/W	00h	Watch Dog Timer Control Register
07h	72h	R/W	001s0000b	Watch Dog Timer Configuration Register
07h	73h	R/W	38h	Watch Dog Timer Time-out Value (LSB) Register
07h	74h	R/W	00h	Watch Dog Timer Time-out Value (MSB) Register

Configure Control (Index=02h)

This register is write only. Its values are not sticky; that is to say, a hardware reset will automatically clear the bits, and does not require the software to clear them.

Bit	Description
7-2	Reserved
1	Returns to the "Wait for Key" state. This bit is used when the configuration sequence is completed.
0	Resets all logical devices and restores configuration registers to their power-on states.

Watch Dog Timer 1, 2, 3 Control Register (Index=71h,81h,91h Default=00h)

Bit	Description
7	WDT Timeout Enable(WTE) 1: Disable. 0: Enable.
6	WDT Reset upon Mouse Interrupt(WRKMI) 0: Disable. 1: Enable.
5	WDT Reset upon Keyboard Interrupt(WRKBI) 0: Disable. 1: Enable.
4	Reserved
3-2	Reserved
1	Force Time-out(FTO) This bit is self-clearing.
0	WDT Status(WS) 1: WDT value reaches 0. 0: WDT value is not 0.

Watch Dog Timer 1, 2, 3 Configuration Register (Index=72h,

82h, 92h Default=001s0000b)

Bit	Description
7	WDT Time-out Value Select 1 (WTVS) 1: Second 0: Minute
6	WDT Output through KRST (Pulse) Enable(WOKE) 1: Enable 0: Disable
5	WDT Time-out value Extra select(WTVES) 1: 64ms x WDT Timer-out value (default = 4s) 0: Determined by WDT Time-out value select 1 (bit 7 of this register)
4	WDT Output through PWROK (Pulse) Enable(WOPE) 1: Enable 0: Disable During LRESET#, this bit is selected by JP7 power-on strapping option
3-0	Select interrupt level^{Note1} for WDT(SIL)

**Watch Dog Timer 1,2,3 Time-Out Value (LSB) Register
(Index=73h,83h,93h, Default=38h)**

Bit	Description
7-0	WDT Time-out Value 7-0(WTV)

**Watch Dog Timer 1,2,3 Time-Out Value (MSB) Register
(Index=74h,84h,94h Default=00h)**

Bit	Description
7-0	WDT Time-out Value 15-8(WTV)

A.2 ITE8783 Watchdog Timer Initial Program

```
.MODEL SMALL
.CODE
Main:
CALL Enter_Configuration_mode
CALL Check_Chip
mov cl, 7
call Set_Logic_Device
;time setting
mov cl, 10 ; 10 Sec
dec al
Watch_Dog_Setting:
;Timer setting
mov al, cl
mov cl, 73h
call Superio_Set_Reg
;Clear by keyboard or mouse interrupt
mov al, 0f0h
mov cl, 71h
call Superio_Set_Reg
;unit is second.
mov al, 0C0H
mov cl, 72h
```

```
call Superio_Set_Reg  
; game port enable  
mov cl, 9  
call Set_Logic_Device
```

```
Initial_OK:  
CALL Exit_Configuration_mode  
MOV AH,4Ch  
INT 21h
```

```
Enter_Configuration_Mode PROC NEAR  
MOV SI,WORD PTR CS:[Offset Cfg_Port]
```

```
MOV DX,02Eh  
MOV CX,04h  
Init_1:  
MOV AL,BYTE PTR CS:[SI]  
OUT DX,AL  
INC SI  
LOOP Init_1  
RET  
Enter_Configuration_Mode ENDP
```

```
Exit_Configuration_Mode PROC NEAR  
MOV AX,0202h
```

CALL Write_Configuration_Data

RET

Exit_Configuration_Mode ENDP

Check_Chip PROC NEAR

MOV AL,20h

CALL Read_Configuration_Data

CMP AL,87h

JNE Not_Initial

MOV AL,21h

CALL Read_Configuration_Data

CMP AL,81h

JNE Not_Initial

Need_Initial:

STC

RET

Not_Initial:

CLC

RET

Check_Chip ENDP

Read_Configuration_Data PROC NEAR

MOV DX,WORD PTR CS:[Cfg_Port+04h]

```
OUT DX,AL
MOV DX,WORD PTR CS:[Cfg_Port+06h]
IN AL,DX
RET
Read_Configuration_Data ENDP
```

```
Write_Configuration_Data PROC NEAR
MOV DX,WORD PTR CS:[Cfg_Port+04h]
OUT DX,AL
XCHG AL,AH
MOV DX,WORD PTR CS:[Cfg_Port+06h]
OUT DX,AL
RET
Write_Configuration_Data ENDP
```

```
Superio_Set_Reg proc near
push ax
MOV DX,WORD PTR CS:[Cfg_Port+04h]
mov al,cl
out dx,al
pop ax
inc dx
out dx,al
ret
Superio_Set_Reg endp.Set_Logic_Device proc near
```

```
Set_Logic_Device    proc    near
push ax
push cx
xchg al,cl
mov cl,07h
call Superio_Set_Reg
pop cx
pop ax
ret
Set_Logic_Device endp
```

```
;Select 02Eh->Index Port, 02Fh->Data Port
Cfg_Port DB 087h,001h,055h,055h
DW 02Eh,02Fh
```

END Main

Note: Interrupt level mapping

0Fh-Dh: not valid

0Ch: IRQ12

.

.

03h: IRQ3

02h: not valid

01h: IRQ1

00h: no interrupt selected

Appendix

B

I/O Information

B.1 I/O Address Map

Input/output (IO)
[00000000 - 0000001F] Direct memory access controller
[00000000 - 000000CF] PCI bus
[00000010 - 0000001F] Motherboard resources
[00000020 - 00000021] Programmable interrupt controller
[00000022 - 0000003F] Motherboard resources
[00000024 - 00000025] Programmable interrupt controller
[00000028 - 00000029] Programmable interrupt controller
[0000002C - 0000002D] Programmable interrupt controller
[0000002E - 0000002F] Motherboard resources
[00000030 - 00000031] Programmable interrupt controller
[00000034 - 00000035] Programmable interrupt controller
[00000038 - 00000039] Programmable interrupt controller
[0000003C - 0000003D] Programmable interrupt controller
[00000040 - 00000043] System timer
[00000044 - 0000005F] Motherboard resources
[0000004E - 0000004F] Motherboard resources
[00000050 - 00000053] System timer
[00000060 - 00000060] Standard PS/2 Keyboard
[00000061 - 00000061] Motherboard resources
[00000062 - 00000063] Motherboard resources
[00000063 - 00000063] Motherboard resources
[00000064 - 00000064] Standard PS/2 Keyboard
[00000065 - 00000065] Motherboard resources
[00000065 - 0000006F] Motherboard resources
[00000067 - 00000067] Motherboard resources
[00000070 - 00000070] Motherboard resources
[00000070 - 00000077] System CMOS/real time clock
[00000072 - 0000007F] Motherboard resources
[00000080 - 00000080] Motherboard resources
[00000080 - 00000080] Motherboard resources
[00000081 - 00000091] Direct memory access controller
[00000084 - 00000086] Motherboard resources
[00000088 - 00000088] Motherboard resources
[0000008C - 0000008E] Motherboard resources
[00000090 - 0000009F] Motherboard resources
[00000092 - 00000092] Motherboard resources
[00000093 - 0000009F] Direct memory access controller
[000000A0 - 000000A1] Programmable interrupt controller
[000000A2 - 000000BF] Motherboard resources
[000000A4 - 000000A5] Programmable interrupt controller
[000000A8 - 000000A9] Programmable interrupt controller
[000000AC - 000000AD] Programmable interrupt controller
[000000B0 - 000000B1] Programmable interrupt controller
[000000B2 - 000000B3] Motherboard resources
[000000B4 - 000000B5] Programmable interrupt controller
[000000B8 - 000000B9] Programmable interrupt controller
[000000BC - 000000BD] Programmable interrupt controller
[000000C0 - 000000DF] Direct memory access controller

[000000E0 - 000000EF]	Motherboard resources
[000000F0 - 000000F0]	Numeric data processor
[000002E0 - 000002E7]	Communications Port (COM6)
[000002E8 - 000002EF]	Communications Port (COM4)
[000002F0 - 000002F7]	Communications Port (COM5)
[000002F8 - 000002FF]	Communications Port (COM2)
[00000378 - 0000037F]	Printer Port (LPT1)
[000003B0 - 000003BB]	Intel(R) Graphics Media Accelerator 3600 Series
[000003C0 - 000003DF]	Intel(R) Graphics Media Accelerator 3600 Series
[000003E8 - 000003EF]	Communications Port (COM3)
[000003F8 - 000003FF]	Communications Port (COM1)
[00000400 - 0000047F]	Motherboard resources
[00000400 - 0000047F]	Motherboard resources
[000004D0 - 000004D1]	Motherboard resources
[000004D0 - 000004D1]	Programmable interrupt controller
[00000500 - 0000053F]	Motherboard resources
[00000500 - 0000057F]	Motherboard resources
[00000600 - 0000061F]	Motherboard resources
[00000680 - 0000069F]	Motherboard resources
[000006A0 - 000006AF]	Motherboard resources
[000006B0 - 000006EF]	Motherboard resources
[00000A00 - 00000A1F]	Motherboard resources
[00000A20 - 00000A2F]	Motherboard resources
[00000A30 - 00000A3F]	Motherboard resources
[00000D00 - 0000FFFF]	PCI bus
[00001000 - 0000100F]	Motherboard resources
[0000D000 - 0000D0FF]	Realtek PCIe GBE Family Controller #2
[0000D000 - 0000DFFF]	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
[0000E000 - 0000E0FF]	Realtek PCIe GBE Family Controller
[0000E000 - 0000EFFF]	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
[0000F000 - 0000F01F]	Intel(R) N10/ICH7 Family SMBus Controller - 27DA
[0000F020 - 0000F02F]	Intel(R) NM10 Express Chipset
[0000F040 - 0000F05F]	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CB
[0000F060 - 0000F07F]	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27CA
[0000F080 - 0000F09F]	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C9
[0000F0A0 - 0000F0BF]	Intel(R) N10/ICH7 Family USB Universal Host Controller - 27C8
[0000F0C0 - 0000F0C3]	Intel(R) NM10 Express Chipset
[0000F0D0 - 0000F0D7]	Intel(R) NM10 Express Chipset
[0000F0E0 - 0000F0E3]	Intel(R) NM10 Express Chipset
[0000F0F0 - 0000F0F7]	Intel(R) NM10 Express Chipset
[0000F100 - 0000F107]	Intel(R) Graphics Media Accelerator 3600 Series
[0000FFFF - 0000FFFF]	Motherboard resources
[0000FFFF - 0000FFFF]	Motherboard resources

B.2 1st MB Memory Address Map

Address Range	Device
[00000000 - 00000FFF]	Motherboard resources
[00000000 - 00000FFF]	Motherboard resources
[00000000 - 00003FFF]	Motherboard resources
[000A0000 - 000BFFFF]	Intel(R) Graphics Media Accelerator 3600 Series
[000A0000 - 000BFFFF]	PCI bus
[000C0000 - 000DFFFF]	PCI bus
[000E0000 - 000EFFFF]	PCI bus
[000F0000 - 000FFFFFF]	PCI bus
[3F800000 - 3FFFFFFF]	PCI bus
[40000000 - FEBFFFFFF]	PCI bus
[DFC00000 - DFCFFFFFF]	Intel(R) Graphics Media Accelerator 3600 Series
[DFD00000 - DFD03FFF]	Realtek PCIe GBE Family Controller #2
[DFD00000 - DFD0FFFF]	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D2
[DFD04000 - DFD04FFF]	Realtek PCIe GBE Family Controller #2
[DFE00000 - DFE03FFF]	Realtek PCIe GBE Family Controller
[DFE00000 - DFEFFFFFF]	Intel(R) N10/ICH7 Family PCI Express Root Port - 27D0
[DFE04000 - DFE04FFF]	Realtek PCIe GBE Family Controller
[DFF00000 - DFF03FFF]	High Definition Audio Controller
[DFF04000 - DFF043FF]	Intel(R) NM10 Express Chipset
[DFF05000 - DFF053FF]	Intel(R) N10/ICH7 Family USB2 Enhanced Host Controller - 27CC
[E0000000 - EFFFFFFF]	System board
[FEC00000 - FEC00FFF]	Motherboard resources
[FED00000 - FED003FF]	High precision event timer
[FED14000 - FED19FFF]	System board
[FED1C000 - FED1FFFF]	Motherboard resources
[FED1C000 - FED1FFFF]	Motherboard resources
[FED20000 - FED8FFFF]	Motherboard resources
[FED45000 - FED8FFFF]	Motherboard resources
[FEE00000 - FEE00FFF]	Motherboard resources
[FF000000 - FFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[FF000000 - FFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[FFC00000 - FFFFFFFF]	Motherboard resources

B.3 IRQ Mapping Chart

Interrupt request (IRQ)	Description
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000001 (01)	Standard PS/2 Keyboard
(ISA) 0x00000003 (03)	Communications Port (COM2)
(ISA) 0x00000004 (04)	Communications Port (COM1)
(ISA) 0x00000005 (05)	Communications Port (COM5)
(ISA) 0x00000007 (07)	Communications Port (COM6)
(ISA) 0x00000008 (08)	System CMOS/real time clock
(ISA) 0x0000000A (10)	Communications Port (COM3)
(ISA) 0x0000000B (11)	Communications Port (COM4)
(ISA) 0x0000000C (12)	Microsoft PS/2 Mouse
(ISA) 0x0000000D (13)	Numeric data processor
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
(ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
(ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
(ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
(ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
(ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
(ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System
(ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
(ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
(ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
(ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
(ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
(ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
(ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
(ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
(ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
(ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System

(ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
(ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
(ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
(ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
(ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
(ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
(ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
(ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
(ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
(ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
(ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
(ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
(ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
(ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
(ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
(ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
(ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
(ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
(ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
(ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
(ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
(ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
(ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
(ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
(ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
(ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
(ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
(ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
(ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
(ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
(ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
(ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
(ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
(ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
(ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
(ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
(ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System

B.4 DMA Channel Assignments

- Direct memory access (DMA)
- 4 Direct memory access controller

Appendix

C

AHCI Setting

C.1 Setting AHCI


OS installation to setup AHCI Mode.

Step 1: Copy the files below from “Driver CD -> STEP5-AHCI\WIN7_32\F6

Install Floppy Create for 32 and 64 bit Windows” to Disk



Step 2: Setup OS

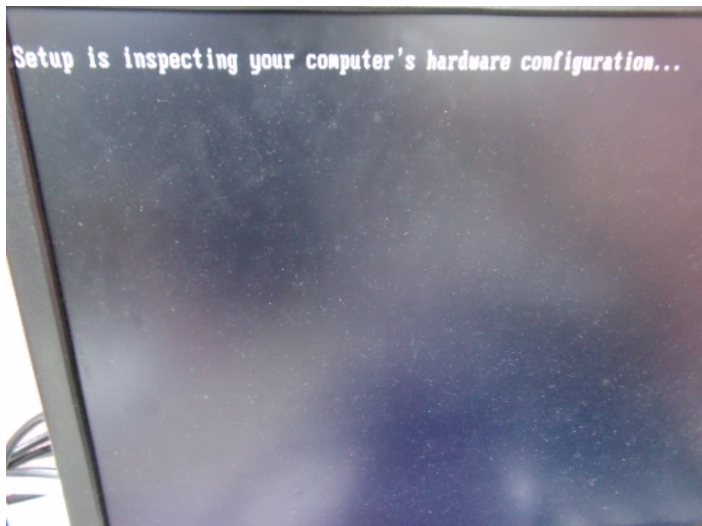

Step 3: Press "F6"



Step 4: Choose "S"



Step 5: Choose "Intel® NM10 Express Chipset"



Step 6: It will show the model number you select and then press "ENTER"

Step 7: Setup is loading files

